NEXCOM International Co., Ltd.

Industrial Computing Solutions

Multi-Media Panel PC

MPPC 2120T/3220T

User Manual

NEXCOM International Co., Ltd.
Published September 2012

www.nexcom.com

Contents

Preface

Copyright iv
Disclaimer iv
Acknowledgements iv
Regulatory Compliance Statements iv
Declaration of Conformity iv
RoHS Compliance v
Warranty and RMA vi
Safety Information ix
Installation Recommendations ix
Safety Precautions x
Technical Support and Assistance xi
Conventions Used in this Manual xi
Global Service Contact Information xii
Package Contents xv
Ordering Information xvi

Chapter 1: Product Introduction

MPPC 2120T 1
MPPC 3220T 2
Specifications 3
Getting to Know the MPPC 2120T 5
Getting to Know the MPPC 3220T 8
Mechanical Dimensions 11

Chapter 2: Jumpers And Connectors

Before You Begin 13
Precautions 13
Jumper Settings 14
Locations of the Jumpers and Connectors 15
Jumpers 17
Connectors Pin Definitions 19
External I/O Interface 19
12V-30V DC Power Input 19
PS/2 Keyboard/Mouse Port 19
COM1 Port (Isolation with RS422/485) 20
COM2 Port (Isolation with RS422/485) 21
USB Ports 22
LAN1 Port 22
LAN2 Port 23
Line-out Jack 23
Internal Connectors 24
VGA Connector 24
Power Button Connector 24
Reset Button 25
SATA DOM Power Connector 25
SATA Port 26
Touch Sensor Connector 27
USB Connector 27

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

CompactFlash 28
Power LED Connector 29
HDD Active LED Connector 29
Mini-PCIe Slots 30
Line-in/Mic-in Connector 31
Speaker-out Connector 31
Block Diagram 32

Chapter 3: System Setup

Installing a SATA Hard Drive 33
Installing a CompactFlash Card 38
Installing a SODIMM 42
Installing a SATA DOM 45
Installing a Mini PCIe Module 49
Installing the 1 to 2 VGA Splitter (Optional) 54
Removing the Rear I/O Ports Cover 61
Panel Mounting 63

Chapter 4: BIOS Setup

About BIOS Setup 72
When to Configure the BIOS 72
Entering Setup 73
BIOS Setup Utility 74
Main 74
Advanced 75
Boot 84
Chipset 87
PCIPnP 89
Security 90
Exit 93

Appendix A: Watchdog Timer

WDT Programming Guide 96
Watchdog Sample Code 96

Appendix B: Power Consumption

Power Consumption Measurement 97

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

PREFACE

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NEXCOM International Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: http://www.nexcom.com. NEXCOM shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

Acknowledgements

MPPC 2120T/3220T is a trademark of NEXCOM International Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

Regulatory Compliance Statements

This section provides the FCC compliance statement for Class B devices and describes how to keep the system CE compliant.

Declaration of Conformity

FCC

This equipment has been tested and verified to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

RoHS Compliance

NEXCOM RoHS Environmental Policy and Status Update

NEXCOM is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with European Union RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2002/95/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NEXCOM has established an engineering and manufacturing task force in to implement the introduction of green products. The task force will ensure that we follow the standard NEXCOM development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NEXCOM are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

How to recognize NEXCOM RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2006 will be RoHS compliant. They will use the usual NEXCOM naming convention.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Warranty and RMA

NEXCOM Warranty Period

1. NEXCOM makes products in accordance with the Industry standard and, NEXCOM warrants that all her Industry-grade IPC and System products will be free from defect in neither material nor workmanship for twenty-four (24) months from the day of invoice issued.

2. For NEXCOM Panel PC product lines (the APPC, MPPC series), they are also guaranteed against defect in materials and workmanship for the period of twenty-four (24) months in their motherboard design. For 3rd party parts, it follows with original suppliers' standard: 12 months for battery pack and LCD, 24 months for adaptor / add on modules (including GSM module, RFID module, and antenna).

3. If NEXCOM determines customer's warranty claim is valid, NEXCOM will repair or replace product(s) without additional charge for parts and labor. An extended Warranty Program will extend the warranty period of the product accordingly.

Warranty Coverage

The warranty applies only to products manufactured or distributed by NEXCOM and her subsidiaries. This warranty covers all the products/shipments except for:

1. Any claimed defect, products that have been repaired or modified by persons who have not been authorized by NEXCOM or, products which have been subjected to misuse, abuse, accident, improper installation, or usage not in accordance with the product instruction. NEXCOM assumes no liability as a consequence of such events under the term of this warranty.

   One example is the replacement of Tablet's or Hand-held's LCD display due to scratching stains or other degradation; these will not be covered under this warranty.

2. Damages caused by customers' delivery/shipping of the product or, product failure resulted from electrical power/voltage shock, or, installation of parts/components which are not supplied/approved by NEXCOM in advance.

3. Third-party products:

   a. Software, such as the device drivers,

   b. External devices such as HDD, printer, scanner, mouse, LCD panel, battery, and so on,

   c. Accessory/parts that were not approved by NEXCOM and,

   d. Accessory/parts were added to products after they were shipped from NEXCOM.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Product will be treated as "Out of Warranty " if:

a. It expires the warranted 24 months period from the day it was purchased.

b. It had been altered by persons other than an authorized NEXCOM service person or, which have been subjected to misuse, abuse, accident, or improper installation.

c. It doesn't have the original NEXCOM Serial Number labeling for NEXCOM's warranty period identification or, tracking.

RMA that NEXCOM has determined not to be covered by the warranty will be charged the NEXCOM Standard Repair Fee for the repairing. If a RMA is determined to be not repairable, customer will be notified and product(s) may be returned to customer at their request; a minimum service fee may be charged however.

NEXCOM Return Merchandise Authorization (RMA) Procedure

For the RMA (Return Merchandise Authorization) shipment, customer is responsible for packaging and shipping the product to the designated NEXCOM service sites, with shipping charges prepaid by the customer. The original NEXCOM shipping box should be used whenever possible. NEXCOM shall pay for the return of the product to the customer's location. In case of expedited shipping request, an extra service charge shall be assessed and the customer is responsible for this extra return shipping charge.

1. Customers should enclose the "NEXCOM RMA Service Form" with the returned products.

2. Customers need to write down all the information related to the problem on the " NEXCOM RMA Service Form " when applying for the RMA service; information will help to understand the problem, including the fault description, on-screen messages, and pictures if possible.

3. Customers could send back the faulty product with or without the accessories and key parts such as the CPU and DIMM. If the key parts are included, please be noted clearly within the return form. NEXCOM takes no responsibility for the parts which are not listed in the return form.

4. Customers hold the responsibility to ensure that the packing of defective products is durable enough to be resistant against further damage due to the transportation; damage caused by transportation is treated as " Out of Warranty " under our Warranty specification.

5. RMA product(s) returned by NEXCOM to any location other than the customer registered delivery address will incur an extra shipping charge, the customer is responsible for paying the extra shipping charges, duties, and taxes of this shipment.

Product Repairing

1. NEXCOM will repair defective products covered under this limited warranty that are returned to NEXCOM; if products do prove to be defective, they will be repaired during their warranty period unless other warranty terms have been specified.

2. NEXCOM owns all parts removed from repaired products.

3. NEXCOM will use parts made by various manufacturers in performing the repair.

4. The repaired products will be warranted subjected to the original warranty coverage and period only.

5. For products returned as defective but, proved to be no defect/fault after the RMA process, NEXCOM reserves the right to claim for a NDF (No Defect Found) Service Charge.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

6. NEXCOM will issue RMA Report which included Repair Detailed Information to the customer when the defective products were repaired and returned.

7. In addition to the above, NEXCOM may authorize Independent/Third-party suppliers to repair the defective products for NEXCOM.

Out Of Warranty Service

There will be a service charge from NEXCOM for the "Out Of Warranty" product service; they are the Basic Diagnostic Service Fee and the Advanced Component Replacement Fee respectively. And, if the product can not be repaired, NEXCOM will either return the product to the customer or, just scrap it, followed by customer's instruction.

1. Testing and Parts Replacement

   NEXCOM will have the following Handling Charges for those OoW products that returned:

   a. Basic Labor Cost and Testing Fee: as Table listed.

   b. Parts Fee: NEXCOM will charge for main IC chipsets such as the N.B., S.B., Super-IO, LAN, Sound, Memory, and so on.

   c. 3rd-party Device Fee: products replacement for CPU, DIMM, HDD, Chassis, and UPS.

2. Out of Warranty product will have a three months warranty for the fixed issues. If the product failed with different problem within 3 months, they will still incur the service charge of "Out of Warranty".

3. Out of Warranty "products will not be repaired without a signed PI from the customer, the agreement of the repair process.

   Add-on card, 3rd Party Device and board level repair cost higher than new product prices, customer can abandon to sign PI to repair and, please contact with sales to buy new products.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Warnings

Read and adhere to all warnings, cautions, and notices in this guide and the documentation supplied with the chassis, power supply, and accessory modules. If the instructions for the chassis and power supply are inconsistent with these instructions or the instructions for accessory modules, contact the supplier to find out how you can ensure that your computer meets safety and regulatory requirements.

Cautions

Electrostatic discharge (ESD) can damage system components. Do the described procedures only at an ESD workstation. If no such station is available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the computer chassis.

Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needlenose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Safety Precautions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. Do not leave this equipment in either an unconditioned environment or in a above 40°C storage temperature as this may damage the equipment.
8. The openings on the enclosure are for air convection to protect the equipment from overheating. DO NOT COVER THE OPENINGS.
9. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
10. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
11. All cautions and warnings on the equipment should be noted.
12. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
13. Never pour any liquid into an opening. This may cause fire or electrical shock.
14. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
15. If one of the following situations arises, get the equipment checked by service personnel:

    a. The power cord or plug is damaged.

    b. Liquid has penetrated into the equipment.

    c. The equipment has been exposed to moisture.

    d. The equipment does not work well, or you cannot get it to work according to the user's manual.

    e. The equipment has been dropped and damaged.

    f. The equipment has obvious signs of breakage.
16. Do not place heavy objects on the equipment.
17. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
18. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.
19. The computer is provided with CD drives that comply with the appropriate safety standards including IEC 60825.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Technical Support and Assistance

1. For the most updated information of NEXCOM products, visit NEXCOM's website at www.nexcom.com.

2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
   - Product name and serial number
   - Detailed information of the peripheral devices
   - Detailed information of the installed software (operating system, version, application software, etc.)
   - A complete description of the problem
   - The exact wordings of the error messages

Warning!

1. Handling the unit: carry the unit with both hands and handle it with care.
2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.
3. CompactFlash: Turn off the unit's power before inserting or removing a CompactFlash storage card.

Conventions Used in this Manual

Warning: Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.

Caution: Information to avoid damaging components or losing data.

Note: Provides additional information to complete a task easily.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Global Service Contact Information

Headquarters

Taiwan

15F, No. 920, Chung-Cheng Rd., ZhongHe District,
New Taipei City, 23586,
Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7782
http://www.nexcom.com.tw

USA

NEXCOM USA

3758 Spinnaker Court Fremont,
CA, 94538, USA
Tel: +1-510-656-2248
Fax: +1-510-656-2158
http://www.nexcom.com

France

NEXCOM France

La Grande Arche-Paroi Nord, 92044 Paris La Défense, France
Tel: +33 (0)1 40 90 33 35
Fax: +33 (0)1 40 90 31 01
http://www.nexcom.eu

Germany

NEXCOM GmbH

Leopoldstraße Business Centre, Leopoldstraße 244,
80807 Munich, Germany
Tel: +49-89-208039-278
Fax: +49-89-208039-279
http://www.nexcom.eu

Italy

NEXCOM ITALIA S.r.l

Via Gaudenzio Ferrari 29,
21047 Saronno (VA), Italia
Tel: +39 02 9628 0333
Fax: +39 02 9619 8846
http://www.nexcom.eu

United Kingdom

NEXCOM EUROPE

10 Vincent Avenue, Crownhill Business Centre,
Milton Keynes, Buckinghamshire
MK8 0AB, United Kingdom
Tel: +44-1908-267121
Fax: +44-1908-262042
http://www.nexcom.eu

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

China

NEXCOM China

2F, Block 4, Venus Plaza, Building 21,
ZhongGuanCun Software Park, No. 8,
Dongbeiwang West Road, Haidian District,
Beijing, 100193, China
Tel: +86-10-8282-5880
Fax: +86-10-8282-5955
http://www.nexcom.cn

China-Shanghai Office

Room 1505, Greenland He Chuang Building,
No. 450 Caoyang Rd.,
Shanghai, 200062, China
Tel: +86-21-6150-8008
Fax: +86-21-3251-6358
http://www.nexcom.cn

China-Nanjing Office

Hall C, Block 17, Tian Xing Cui Lang Building,
No. 49 Yunnan North Rd.,
Nanjing, 210018, China
Tel: +86-25-8315-3486
Fax: +86-25-8315-3489
http://www.nexcom.cn

China-Wuhan Office

1-C1804/1805, Mingze Liwan,
No. 519 South Luoshi Rd., Hongshan District,
Wuhan, 430070, China
Tel: +86-27-8722-7400
Fax: +86-27-8722-7400
http://www.nexcom.cn

China-Chengdu Office

9F, Shuxiangxie,Xuefu Garden,
No.12 Section 1, South Yihuan Rd.,
Chengdu, 610061,China
Tel: +86-28-8523-0186
Fax: +86-28-8523-0186
http://www.nexcom.cn

China-Shenzhen Office

Western Room 708, Block 210,
Tairan Industry & Trading Place, Futian Area,
Shenzhen, 518040, China
TEL: +86-755-833 7203
FAX: +86-755-833 7213
http://www.nexcom.cn

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Japan

NEXCOM Japan

9F, Tamachi Hara Bldg.,
4-11-5, Shiba Minato-ku,
Tokyo, 108-0014, Japan
Tel: +81-3-5419-7830
Fax: +81-3-5419-7832
http://www.nexcom-jp.com

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Package Contents

Before continuing, verify that the package you received is complete. Your package should have all the items listed in the table.

MPPC 2120T

Item	Name	Qty
1	PS/2 Y Cable	1
3	Driver CD	1
5	AC/DC Power Adapter	1
6	Flat Head for HDD Installation	4

MPPC 3220T

Item	Name	Qty
1	PS/2 Y Cable	1
2	Driver CD	1
3	AC/DC Power Adapter	1
4	Flat Head for HDD Installation	4

PS/2 Y Cable

Driver CD

AC/DC Power Adapter for MPPC 2120T

AC/DC Power Adapter for MPPC 3220T

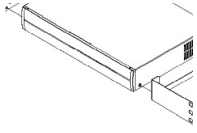

Flat Head for HDD Installation

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Ordering Information

The following provides ordering information for the Panel PC series.

- **Barebone**

  MPPC 2120T Ver. B (P/N: 90IM2120T02X0)
  - 21.5" LED backlight touch panel PC with Intel® Atom™ D525 1.8GHz, 1GB DDR3, 2x RS232/ 422/ 485, power adapter

  MPPC 3220T (P/N: 90IM3220T00X0)
  - 32" LED backlight touch panel PC with Intel® Atom™ D525 1.8 GHz, touch screen, 1GB DDR3, 2x RS232/ 422/ 485, power adapter

- **Options**

  1. MPPC 2-port VGA Video Splitter Kit (P/N: 7500VGA006X00)

  2. MPPC 2120T Panel Mount Kit (P/N: 5043330466X00)
     - 6x Panel Mount Brackets with screws
     - 10x Panel Mount Kit with screws

     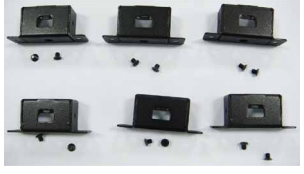

     Panel Mount Brackets With Screws

     10x Panel Mount Kit With Screws

  3. MPPC 3220T Panel Mount Kit (P/N: 5043330465X00)
     - 8x Panel Mount Brackets with screws
     - 10x Panel Mount Kit with screws

     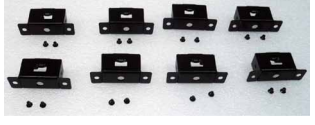

     Panel Mount Brackets With Screws

     10x Panel Mount Kit With Screws

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Chapter 1: Product Introduction

MPPC 2120T

Overview

Key Features

- 16:9 21.5" Fanless Panel Computer
- Intel® Atom™ D525, Dual Core, Low Consumption CPU
- Dual GbE, Line-in, Line-out, Mic-in, PS2 KB/MS
- 4 x USB, 2 x mini-PCIe sockets, 1 x CF, 2 x RS232/422/485
- DDR3 1GB, 2.5" HDD Bracket, Two Speakers
- Optional Wi-Fi Module, 2.5"HDD, VGA Splitter, Panel Mount Kit
- Panel Mount, VESA Mount Compliance
- Wide Range Power Input 12V~ 30V DC

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

MPPC 3220T

Overview

Key Features

- 16:9 32” Fanless Panel Computer
- Intel® Atom™ D525, Dual Core, Low Consumption CPU
- SAW touch screen
- Dual GbE, Line-in, Line-out, Mic-in, PS2 KB/MS
- 4 x USB, 2 x mini-PCIe sockets, 1 x CF, 2 x RS232/422/485
- DDR3 1GB, 2.5” HDD Bracket, Two Speakers
- Optional Wi-Fi Module, 2.5”HDD, VGA Splitter, Panel Mount Kit
- Panel Mount, VESA Mount Compliance

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Specifications

Panel

- MPPC 2120T
  LCD size: 21.5", 16:9
  Resolution: full HD, 1920 x 1080
  Luminance: 420 cd/m²
  Contrast ratio: 3000
  LCD color: 16.7M
  Viewing angle: 89 (U), 89 (D), 89 (L), 89 (R)
  Backlight: LED
  Touch screen: 5-line Resistive
  Touch light transmission: 80%
  Touch interface: USB
- MPPC 3220T
  LCD size: 32", 16:9
  Resolution: full HD, 1920 x 1080
  Luminance: 400 cd/m²
  Contrast ratio: 4000
  LCD color: 1073.7M
  Viewing angle: 89 (U), 89 (D), 89 (L), 89 (R)
  Backlight: LED
  Touch screen: SAW (Surface Acoustic Wave)
  Touch light transmission: 92%
  Touch interface: USB

System

- CPU: Intel® Atom™ D525, 1.8Hz
- BIOS: AMI BIOS
- System chipset: Intel® ICH8M
- System memory:
  1x 204-pin DDR3 SODIMM socket, 1G DDR3 (default),
  Supports up to 2GB DDR3 800, Non-ECC and Un-buffered
- SSD: one external locked CF socket by IDE supports Type I/II compact Flash card
- Hard drive bay: optional 2.5" SATA HDD or SATA DOM
- Watchdog timer: Watchdog timeout can be programmable by software from 1 second to 255 seconds and from 1 minute to 255 minutes (Tolerance 15% under room temperature 25°C)
- H/W status monitor: Monitors system temperature, and voltage
- Expansion: 2x Mini-PCIe sockets

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Rear I/O
- COM #1: RS232/422/485
- COM #2: RS232/422/485
- Ethernet: 2 x RJ45
- Clone VGA port: 1 x DB15 (VGA Splitter: optional)
- Audio port: 1 x Line-out; 1 x Line-in; 1 x Mic-in
- USB: 4 x USB 2.0
- PS2 keyboard/mouse
- Power switch
- Reset button

Audio
- AC97 codec: Realtek ALC888
- Audio interface: Line-out, Line-in and Mic-in audio jacks
- Two 2W Speakers

Ethernet
- LAN chip: Dual Intel® 82574L Gigabit LAN
- Ethernet interface: 10/100/1000 Based-Tx Ethernet compatible

Mechanical and Environment
- Color: pantone black
- Mounting:
  Panel/Wall/Stand/VESA 75x75; 100x100;
  400x100mm (MPPC 2120T); 400x200mm (MPPC 3220T)
  Panel Mount Kit (optional)
- Power input:
  12V~ 30V DC (MPPC 2120T); 24V DC (MPPC 3220T)
- Power adapter:
  AC to DC power adaptor: +12V, 60W (MPPC 2120T)
  AC to DC power adaptor: +24V, 180W (MPPC 3220T)
- Vibration:
  IEC 68 2-64 (w/ HDD)
  0.5Grms @ sine, 5~500Hz, 1hr/axis (HDD Operating)
  2.2Grms @ random condition, 5~500Hz, 0.5hr/axis (Non-operating)
- Shock:
  IEC 68 2-27
  HDD: 20G @ wall mount, half sine, 11ms
- Operating temperature: 0°C to 45°C
- Storage temperature: -20°C to 75°C
- Operating humidity:
  20%~80% relative humidity, non-condensing (MPPC 2120T)
  10%~90% relative humidity, non-condensing (MPPC 3220T)
  Limits to be at 90% RH at max 40°C (MPPC 3220T)
- Dimension:
  506.4 x 300.6 x 64.7 mm (MPPC 2120T)
  753 x 442.6 x 86.1 mm (MPPC 3220T)
- Weight:
  8 Kg (MPPC 2120T)
  18.2Kg (MPPC 3220T)

Certifications
- CE approval
- FCC Class B

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Getting to Know the MPPC 2120T

Rear Top

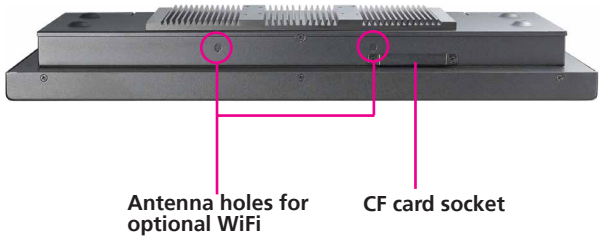

Antenna Holes for Optional WiFi
The 2 external antenna mounting holes are used to mount and connect optional WiFi antennas.

CF Card Socket
Used to insert a CompactFlash card.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Rear Bottom

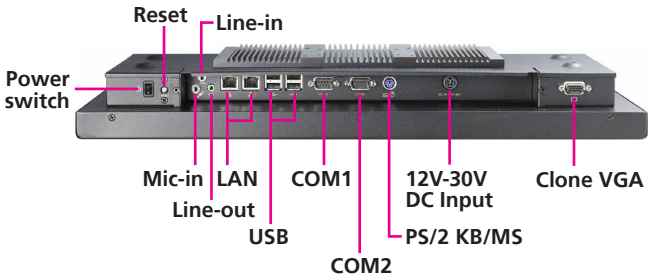

Power Switch
Press to power-on or power-off the system.

Reset Button
Press this button to restart the system.

Line-in
Used to connect an audio device, such as a CD player.

Line-out
Used to connect a headphone or a speaker.

Mic-in
Used to connect an external microphone.

LAN
Used to connect the system to a local area network.

USB
Used to connect USB 2.0/1.1 devices.

COM1 and COM2
These COM ports support RS232/422/485 compatible serial devices.

PS/2 KB/MS
Used to connect a PS/2 keyboard and a PS/2 mouse via a cable.

12-30V DC Input
Used to plug a DC power cord.

Clone VGA (optional)
Used to connect an analog VGA monitor.

Note: The VGA splitter is purchased separately.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Rear

VESA mounting hole 400 x 100 mm
VESA mounting hole 100 x 100 mm
VESA mounting hole 75 x 75 mm

VESA Mounting Holes

These are mounting holes for VESA mount.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Getting to Know the MPPC 3220T

Rear Top

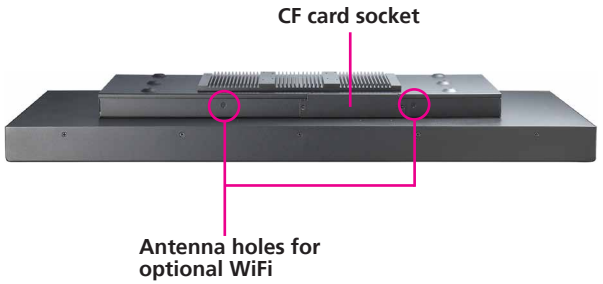

Antenna Holes for Optional WiFi

The 2 external antenna mounting holes are used to mount and connect optional WiFi antennas.

CF Card Socket

Used to insert a CompactFlash card.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Rear Bottom

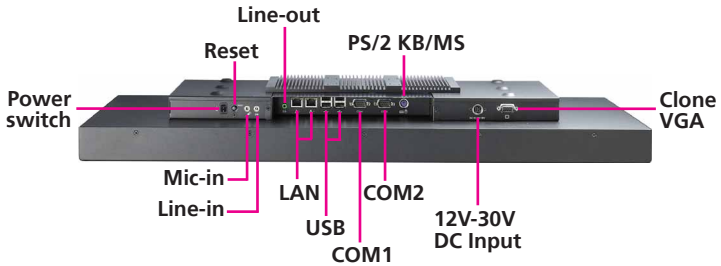

Power Switch
Press to power-on or power-off the system.

Reset Button
Press this button to restart the system.

Line-in
Used to connect an audio device, such as a CD player.

Line-out
Used to connect a headphone or a speaker.

Mic-in
Used to connect an external microphone.

LAN
Used to connect the system to a local area network.

USB
Used to connect USB 2.0/1.1 devices.

COM1 and COM2
These COM ports support RS232/422/485 compatible serial devices.

PS/2 KB/MS
Used to connect a PS/2 keyboard and a PS/2 mouse via a cable.

24V DC Input
Used to plug a DC power cord.

Clone VGA (optional)
Used to connect an analog VGA monitor.

Note: The VGA splitter is purchased separately.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Rear

VESA mounting hole 400 x 200 mm
VESA mounting hole 100 x 100 mm
VESA mounting hole 75 x 75 mm

VESA Mounting Holes

These are mounting holes for VESA mount.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Mechanical Dimensions

MPPC 2120T

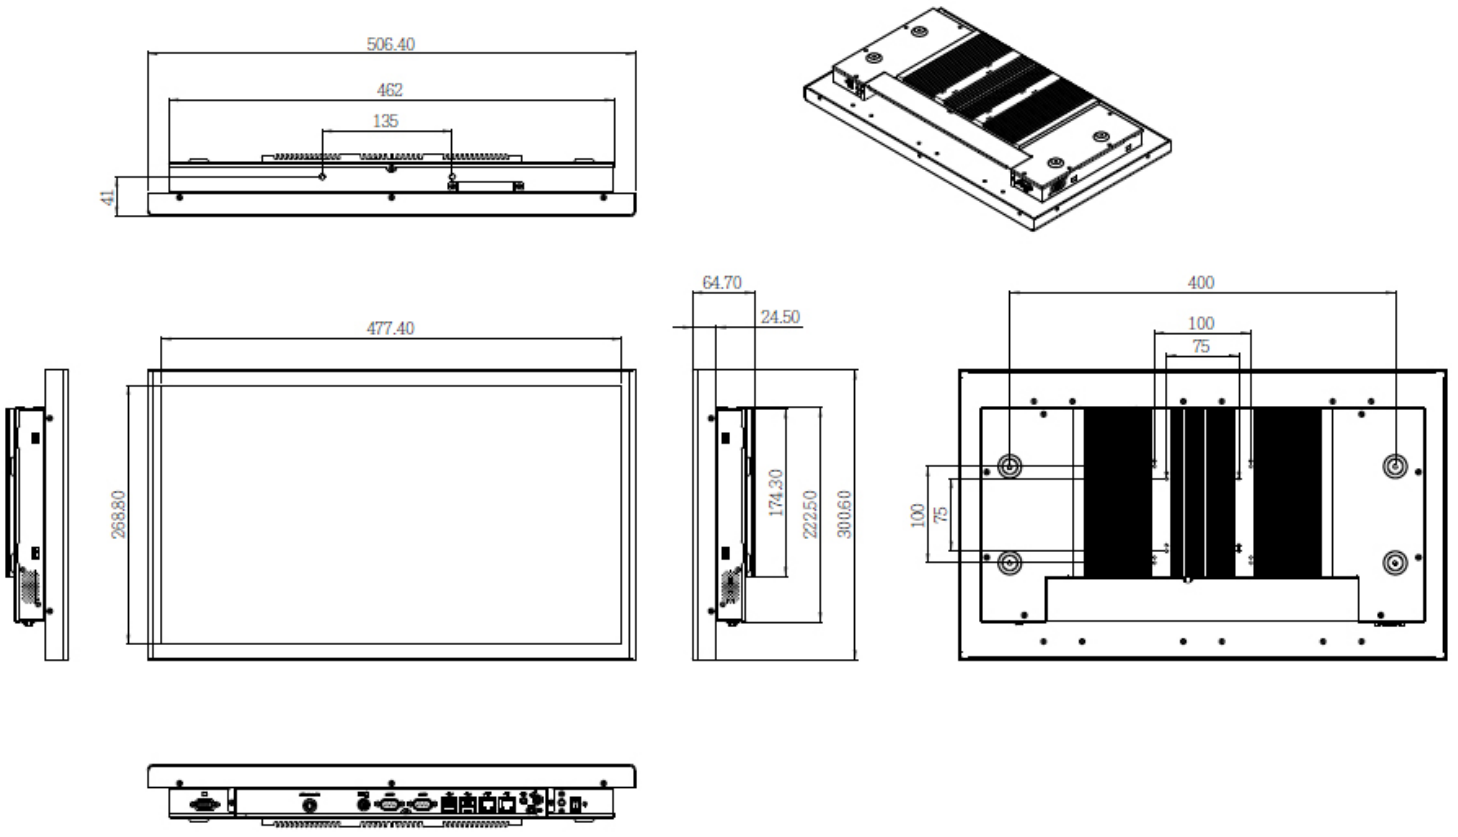

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

MPPC 3220T

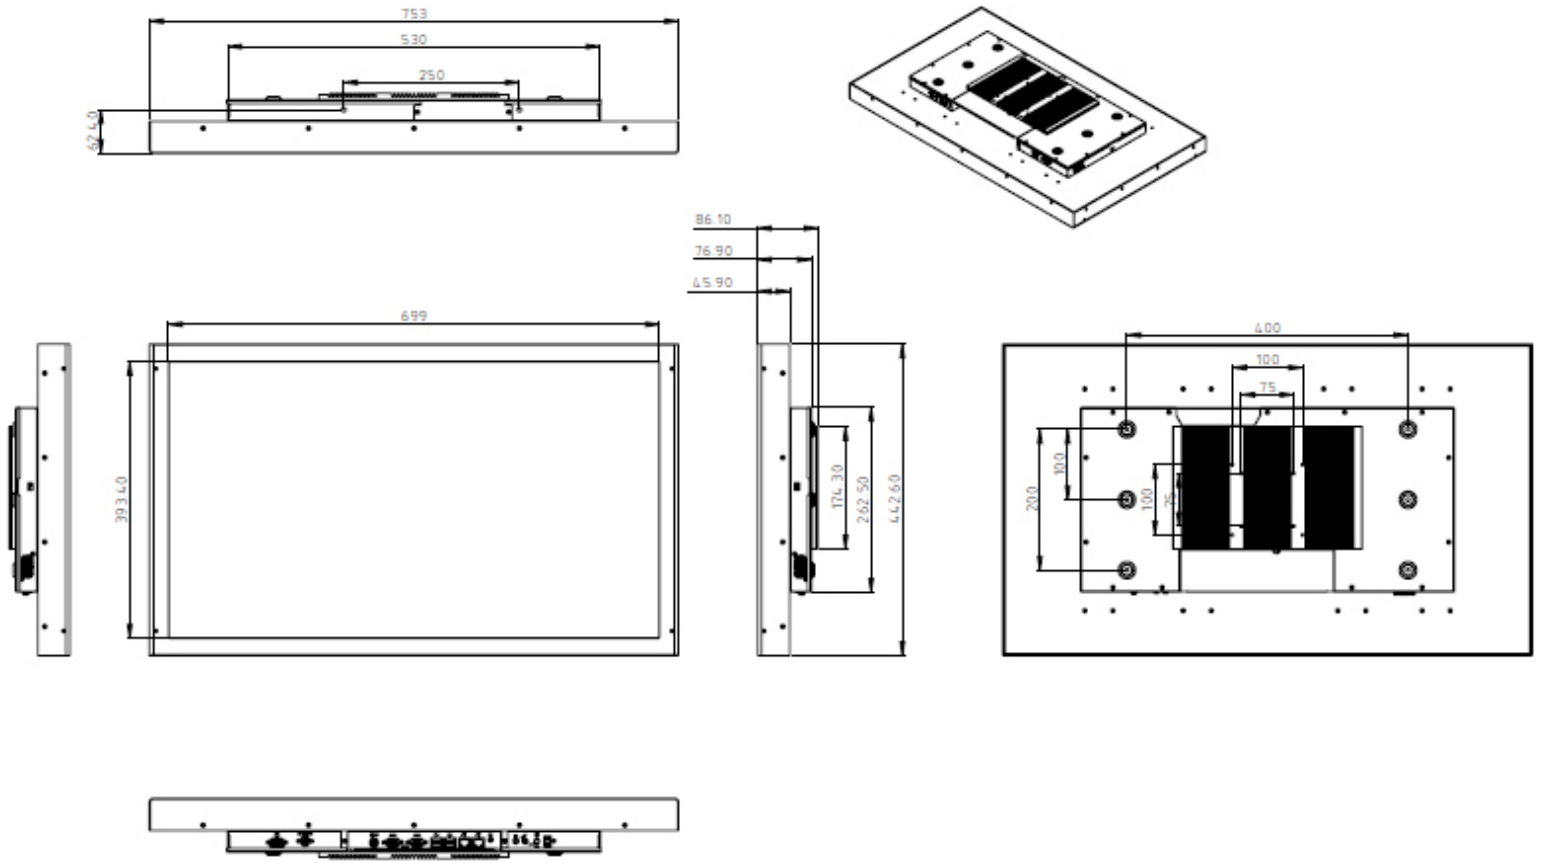

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Chapter 2: Jumpers and Connectors

This chapter describes the jumpers and connectors on the motherboard. Note that information in this chapter applies to MPPC 2120T/3220T.

Before You Begin

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
  - A Philips screwdriver
  - A flat-tipped screwdriver
  - A set of jewelers Screwdrivers
  - A grounding strap
  - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the electronic components. Humid environment tend to have less static electricity than dry environments. A grounding strap is warranted whenever danger of static electricity exists.

Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on the computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:

- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation.
- Use correct screws and do not over tighten screws.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Jumper Settings

A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is **short**. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is **open**.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).

Two-Pin Jumpers: Open (Left) and Short (Right)

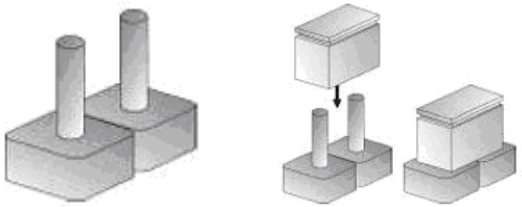

Three-Pin Jumpers: Pins 1 and 2 Are Short

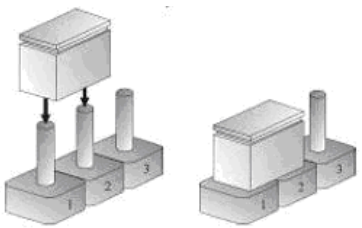

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Locations of the Jumpers and Connectors

Top View

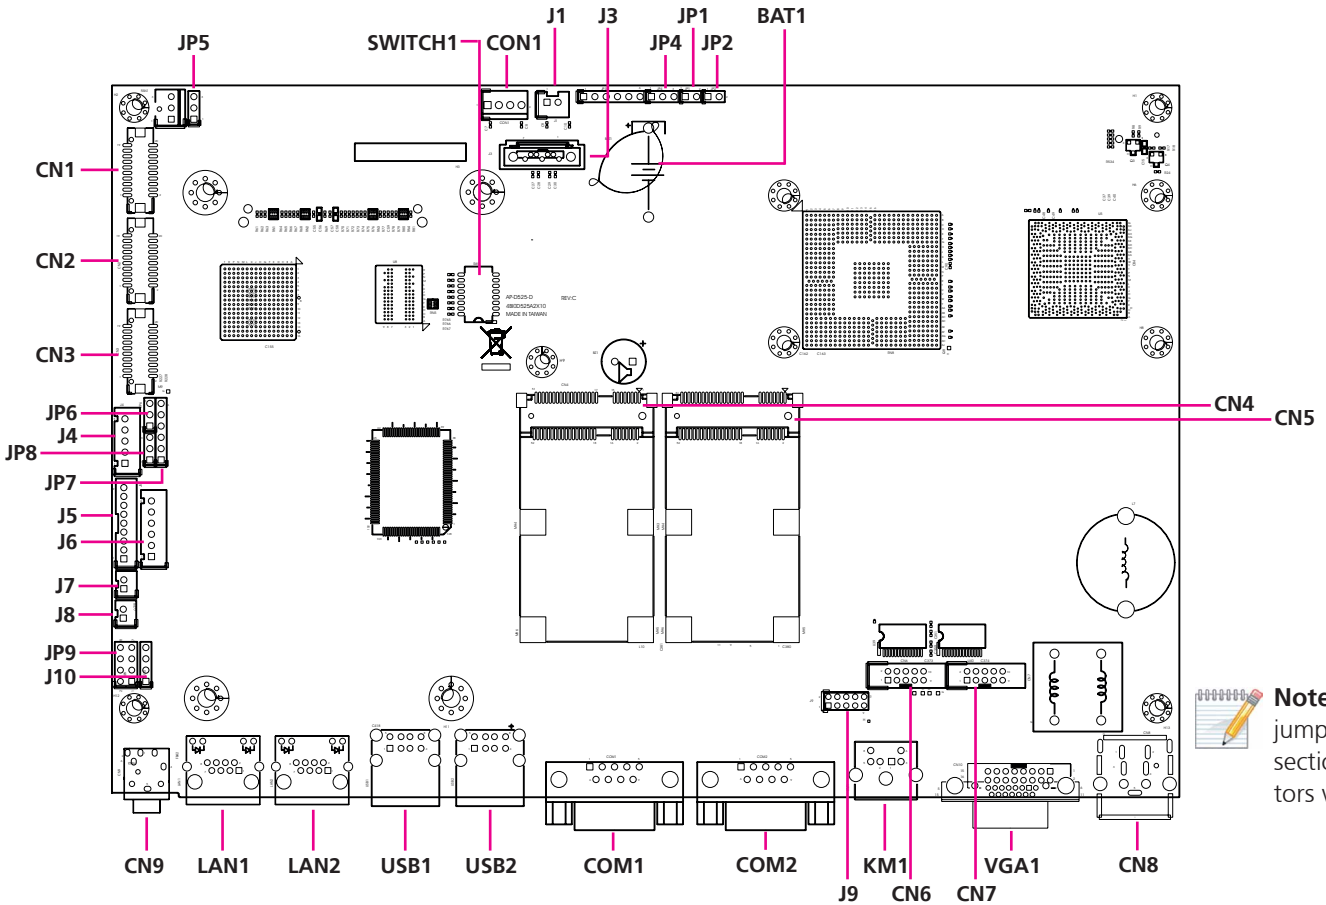

Note: Not all Panel PCs includes the jumpers and connectors shown in this section. The presence of these connectors vary among Panel PCs.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Bottom View

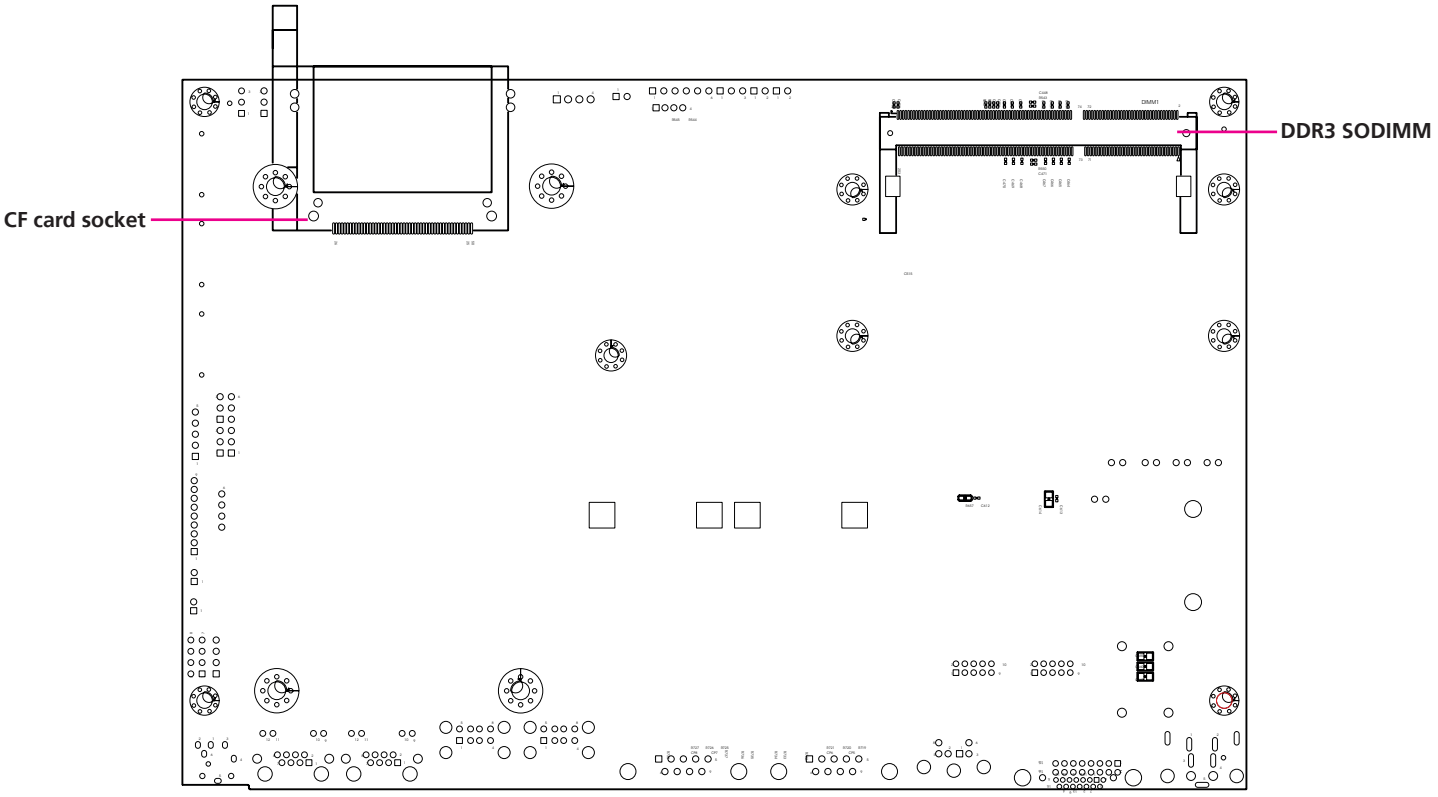

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Jumpers

RTC Clear

Connector type: 1x3 3-pin header, 2.54 mm pitch
Connector location: JP4

Pin	Settings
1-2 On	Normal
2-3 On	CMOS Clear

1-2 On: default

Pin	Definition
1	NC
2	RTC Power
3	GND

Power Type Select

Connector type: 1x3 3-pin header, 2.54 mm pitch
Connector location: JP5

Pin	Definition
1-2 On	AT Mode
2-3 On	ATX Mode

2-3 On: default

Pin	Definition
1	AUTO (AT MODE)
2	PWRBT In
3	Manual (ATX MODE)

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Touch 4/5/8 Wire Select

Connector type: 1x3 3-pin header, 2.54 mm pitch
Connector location: JP8

Pin	Definition
1-2 On	5 wire
2-3 On	4/8 wire

1-2 On: default

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Connector Pin Definitions

External I/O Interface

12V-30V DC Power Input

Connector size: DC 4-pin DIN Power Jack with Shield
Connector location: CN8

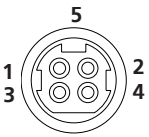

Pin	Definition
1	DC+
2	DC+
3	DC-
4	DC-
5	GND

PS/2 Keyboard/Mouse Port

Connector type: PS/2, Mini-DIN-6, JST-2.0mm-M-180
Connector location: KM1

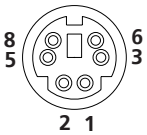

Pin	Definition
1	KB_DATA
2	MS_DATA
3	GND
4	NC
5	VCC5
6	KB_CLK
7	NC
8	MS_CLK

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

COM1 Port (Isolation with RS422/485)

Connector type: DB-9
Connector location: COM1



RS232

Pin	Definition	Pin	Definition
1	DCD#: Data Carrier Detect	2	RXD#: Receive Data
3	TXD: Transmit Data	4	DTR#: Data Terminal Ready
5	GND	6	DSR#: Data Set Ready
7	RTS#: Request To Send	8	CTS#: Clear To Send
9	RI#: Ring Indicator (could be a 5V or 12V power pin)		

RS422

Pin	Definition	Pin	Definition
1	TXD-: Transmit Data Negative	2	TXD+: Transmit Data Positive
3	RXD+: Receive Data Positive	4	RXD-: Receive Data Negative
5	GND DCD#: Data Carrier Detect	6	RTS-: Request To Send Negative
7	RTS+: Request To Send Positive	8	CTS+: Clear to Send Positive
9	CTS-: Clear To Send Negative (could be a 5V or 12V power pin)		

RS485

Pin	Definition	Pin	Definition
1	TXD-: Transmit Data Negative RXD-: Receive Data Negative	2	TXD+: Transmit Data Positive RXD+: Receive Data Positive
3	Reserved	4	Reserved
5	Reserved	6	Reserved
7	Reserved	8	Reserved
9	Reserved (could be a 5V or 12V power pin)		

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

COM2 Port (Isolation with RS422/485)

Connector type: DB-9
Connector location: COM2



RS232

Pin	Definition	Pin	Definition
1	DCD#: Data Carrier Detect	2	RXD#: Receive Data
3	TXD: Transmit Data	4	DTR#: Data Terminal Ready
5	GND	6	DSR#: Data Set Ready
7	RTS#: Request To Send	8	CTS#: Clear To Send
9	RI#: Ring Indicator (could be a 5V or 12V power pin)		

RS422

Pin	Definition	Pin	Definition
1	TXD-: Transmit Data Negative	2	TXD+: Transmit Data Positive
3	RXD+: Receive Data Positive	4	RXD-: Receive Data Negative
5	GND DCD#: Data Carrier Detect	6	RTS-: Request To Send Negative
7	RTS+: Request To Send Positive	8	CTS+: Clear to Send Positive
9	CTS-: Clear To Send Negative (could be a 5V or 12V power pin)		

RS485

Pin	Definition	Pin	Definition
1	TXD-: Transmit Data Negative RXD-: Receive Data Negative	2	TXD+: Transmit Data Positive RXD+: Receive Data Positive
3	Reserved	4	Reserved
5	Reserved	6	Reserved
7	Reserved	8	Reserved
9	Reserved (could be a 5V or 12V power pin)		

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

USB Ports

Connector type: Dual USB port
Connector location: USB1 and USB2

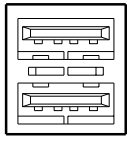

USB1

Pin	Definition	Pin	Definition
1	VCC5	5	VCC5
2	USB0-	6	USB1-
3	USB0+	7	USB1+
4	GND	8	GND

USB2

Pin	Definition	Pin	Definition
1	VCC5	5	VCC5
2	USB2-	6	USB3-
3	USB2+	7	USB3+
4	GND	8	GND

LAN1 Port

Connector type: RJ45 port with LEDs
Connector location: LAN1

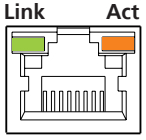

Link	Status
Green Always Lighted	1000M
Orange Always Lighted	100M
Off	10M or No Link

Act	Status
Orange Blinking	Data Activity
Off	No Acitivity

Pin	Definition	Pin	Definition
1	MDI0+	5	MDI2-
2	MDI0-	6	MDI1-
3	MDI1+	7	MDI3+
4	MDI2+	8	MDI3-

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

LAN2 Port

Connector type: RJ45 port with LEDs
Connector location: LAN2

Note: LAN2 supports Wake On LAN (WOL)

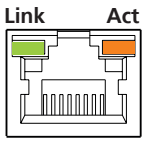

Link	Status
Green Always Lighted	1000M
Orange Always Lighted	100M
Off	10M or No Link

Act	Status
Orange Blinking	Data Activity
Off	No Acitivity

Pin	Definition	Pin	Definition
1	MDI0+	5	MDI2-
2	MDI0-	6	MDI1-
3	MDI1+	7	MDI3+
4	MDI2+	8	MDI3-

Line-out Jack

Connector type: 1x5 5-pin header, 2.0 mm pitch
Connector location: CN9

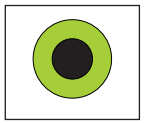

Pin	Definition
1	LOUT_R
2	JD
3	NC
4	LOUT_L
5	GND
6	GND

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Internal Connectors

VGA Connector

Connector type: 2x8 16-pin box header, 2.0 mm pitch
Connector location: VGA1



Pin	Definition	Pin	Definition
1	RED	2	GREEN
3	BLUE	4	NC
5	GND	6	GND
7	GND	8	GND
9	VCC5	10	GND
11	NC	12	VGADATA
13	HSYNC	14	VSYNC
15	VGACLK	16	NC

Power Button Connector

Connector type: 1x2 2-pin header, JST 2.0 mm pitch
Connector location: J7

Pin	Definition
1	PWRBT
2	GND

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Reset Button

Connector type: 1x2 2-pin header, 2.0 mm pitch
Connector location: J8

Pin	Definition
1	PWRBT
2	GND

SATA DOM Power Connector

Connector type: 1x2 2-pin header, JST 2.0 mm pitch
Connector location: J1

Pin	Definition
1	PWRBT
2	GND

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

SATA Port

Connector type: Standard Serial ATAII 7P (1.27mm, SATA-M-180)
Connector location: J3

Pin	Definition
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Touch Sensor Connector

Connector type: 1x9 9-pin boxed header, JST-2.0mm-M-180
Connector location: J5

	Touch Screen Lines		
	8-Wire	**4-Wire**	**5-Wire**
9	Right Sense	N/A	N/A
8	Left Sense	N/A	N/A
7	Bottom Sense	N/A	N/A
6	Top Sense	N/A	Sense (S)
5	Right Excite	Right	LR (X)
4	Left Excite	Left	LL (L)
3	Bottom Excite	Bottom	UR (H)
2	Top Excite	Top	UL (Y)
1	GND	GND	GND

USB Connector

Connector size: 1x6 6-pin JST wafer, 2.54 mm pitch
Connector location: J6

Pin	Definition
1	+5V
2	USB4-
3	USB4+
4	USB5-
5	USB5+
6	GND

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

CompactFlash

Connector type: 1x50 50-pin with Ejector, CompactFlash Type 2
Connector location: IDE1

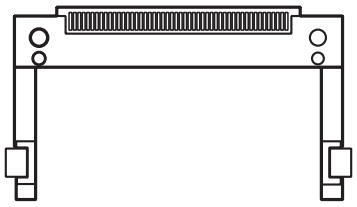

Pin	Description	Pin	Description
1	GND	26	CF_DETECT
2	PD Data3	27	PD Data11
3	PD Data4	28	PD Data12
4	PD Data5	29	PD Data13
5	PD Data6	30	PD Data14
6	PD Data7	31	PD Data15
7	-PCS0	32	-PCS1
8	GND	33	N/C
9	GND	34	-PDIOR
10	GND	35	-PDIOW
11	GND	36	+5V
12	GND	37	IRQ14
13	+5V	38	+5V
14	GND	39	GND
15	GND	40	N/C
16	GND	41	CF_RESET#
17	GND	42	+3.3V
18	PDAddress2	43	PDDREQ
19	PDAddress1	44	PDDACK
20	PDAddress0	45	IDE_ACT#
21	PDData0	46	N/C
22	PDData1	47	PD Data8
23	PDData2	48	PD Data9
24	N/C	49	PD Data10
25	GND	50	GND

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Power LED Connector

Connector type: 1x2 2-pin header, 2.54 mm pitch
Connector location: JP2

Pin	Definition
1	+5V
2	GND

HDD Active LED Connector

Connector type: 1x2 2-pin header, 2.54 mm pitch
Connector location: JP1

Pin	Definition
1	+5V
2	HD_LED#

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Mini-PCIe Slots

Connector location: CN4 and CN5

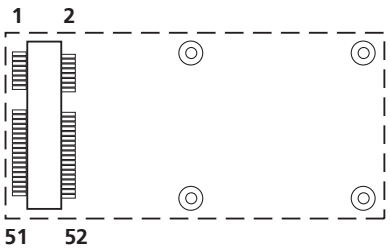

Pin	Definition	Pin	Definition
1	WAKE0#	2	+V3.3_MINI
3	NC	4	GND
5	NC	6	+V1.5S_MINI
7	NC	8	NC
9	GND	10	NC
11	GPP_CLK0_N	12	NC
13	GPP_CLK0_P	14	NC
15	GND	16	NC
17	NC	18	GND
19	NC	20	MINICARD1_DIS#
21	GND	22	PCIE_RST#
23	PCIE_RX2N	24	+V3.3A_MINI
25	PCIE_RX2P	26	GND
27	GND	28	+V1.5S_MINI
29	GND	30	SMB_CLK
31	PCIE_TX2N	32	SMB_DAT
33	PCIE_TX2P	34	GND
35	GND	36	USB_6N
37	GND	38	USB_6P
39	+V3.3A_MINI	40	GND
41	+V3.3A_MINI	42	NC
43	GND	44	NC
45	NC	46	NC
47	NC	48	+V1.5S_MINI
49	NC	50	GND
51	NC	52	+V3.3A_MINI

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Line-in/Mic-in Connector

Connector type: 2x4 8-pin header, 2.54 mm
Connector location: JP9

Pin	Definition	Pin	Definition
1	LINE IN-LP	2	MIC1_L3
3	LINE IN -JD	4	MIC_JD
5	GND	6	GND
7	LINE IN-RP	8	MIC1_R3

Speaker-out Connector

Connector type: 1x4 4-pin header, 2.54 mm pitch
Connector location: J10

Pin	Definition
1	OUT-L+
2	OUT-L-
3	OUT-R+
4	OUT-R-

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Block Diagram

MPPC 2120T/3220T

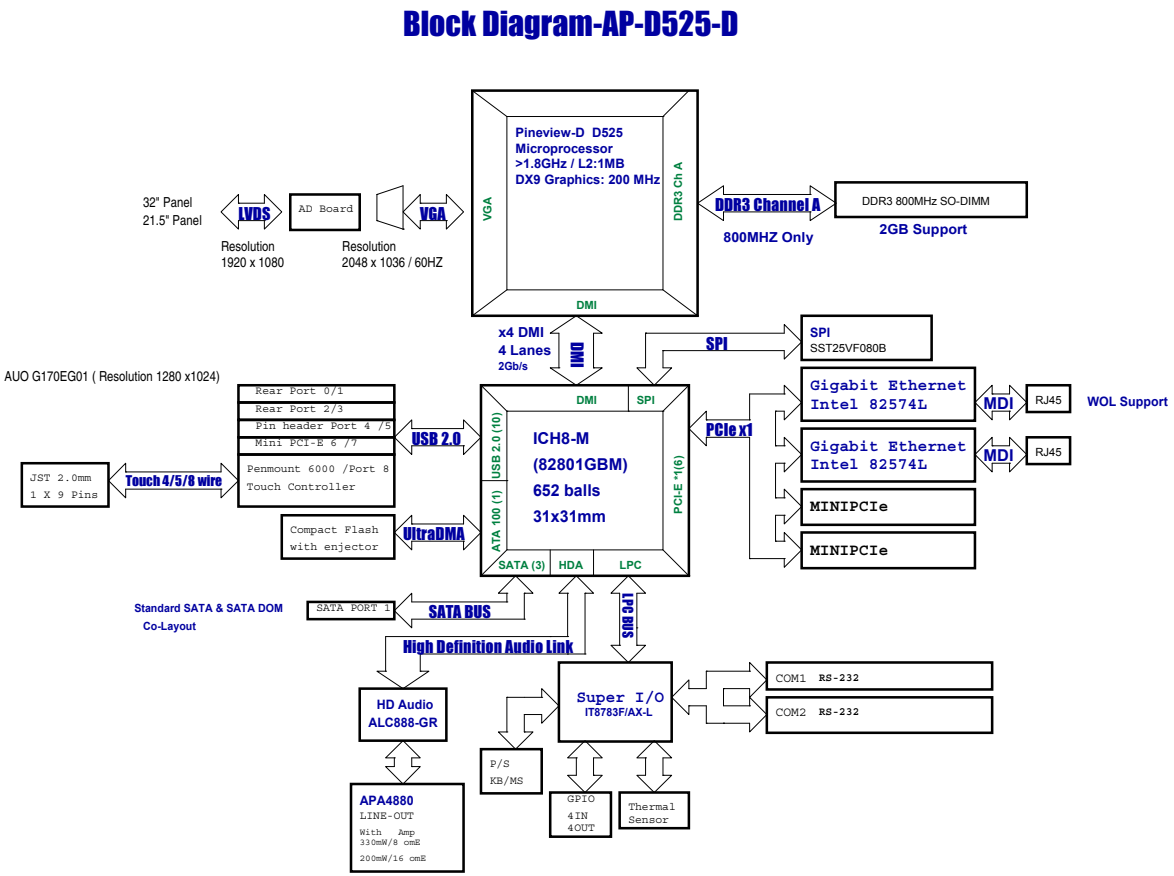

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Chapter 3: System Setup

Installing a SATA Hard Drive

Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.

1. Remove the mounting screws around the chassis cover and then remove the cover.

MPPC 2120T

The dots denote the locations of the screws.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

MPPC 3220T

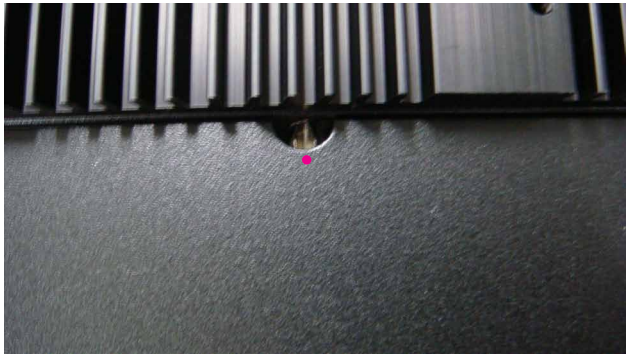

The dots denote the locations of the screws.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

2. Remove the mounting screws of the drive bay.

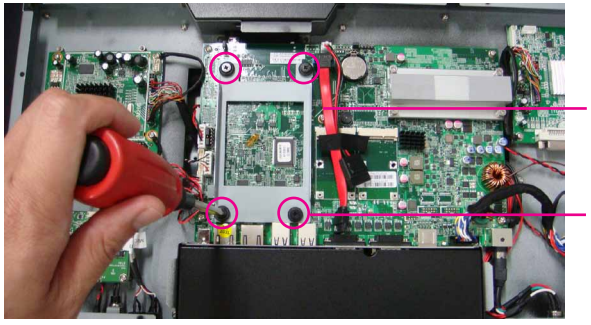

3. Remove the drive bay. The drive bay is used to hold a SATA hard drive.

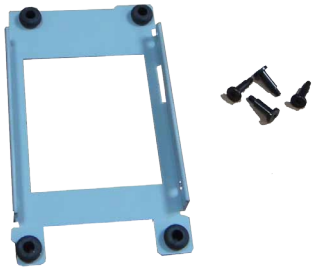

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

4. Place the SATA hard drive on the drive bay.

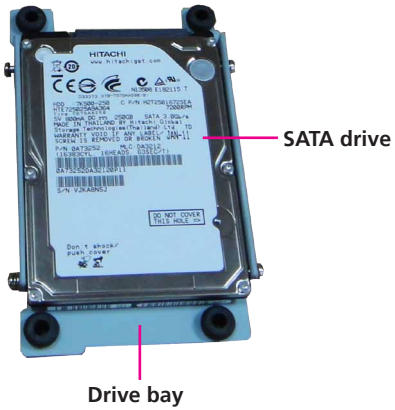

5. Align the mounting holes that are on the sides of the SATA drive with the mounting holes on the drive bay and then use the provided mounting screws to secure the drive in place.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

6. Place the SATA drive in the chassis and then use the provided mounting screws to secure the drive in the chassis.

   Connect the SATA data cable and SATA power cable to the connectors on the SATA drive.

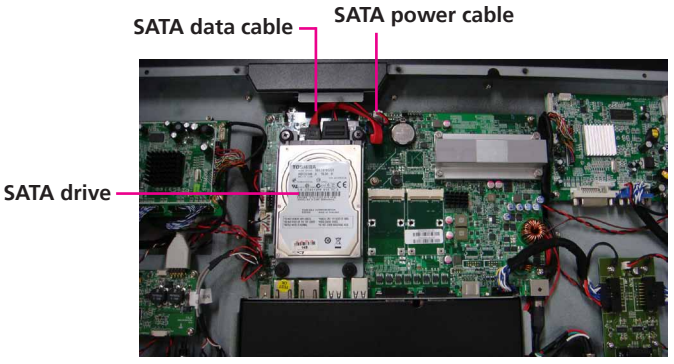

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Installing a CompactFlash Card

MPPC 2120T

1. The CompactFlash card socket is located on the rear top side of the chassis.

2. Remove the mounting screws of the CompactFlash socket's cover.

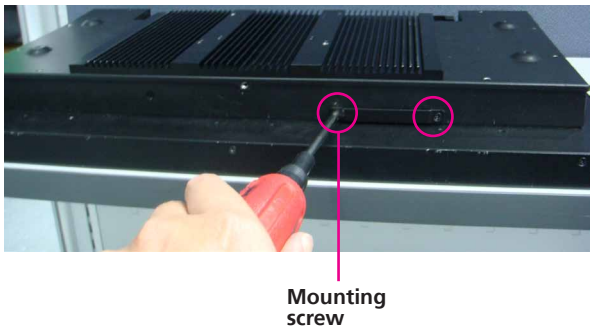

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

3. With the CompactFlash card's label facing up, insert the card until it is completely seated in the socket.

4. Push the Eject button to remove the CompactFlash card.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

MPPC 3220T

1. The CompactFlash card socket is located on the rear top side of the chassis.

2. Remove the mounting screws of the CompactFlash socket's cover.

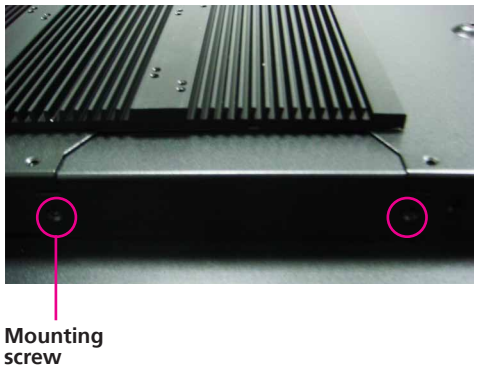

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

3. Remove the CompactFlash socket's cover.

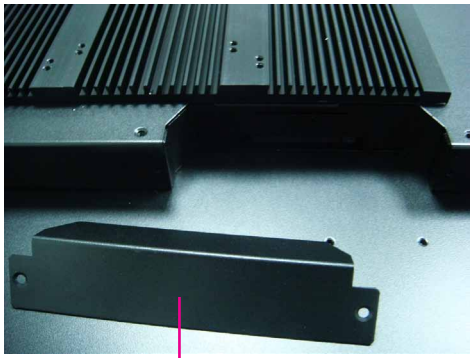

4. With the CompactFlash card's label facing up, insert the card until it is completely seated in the socket and then replace the socket cover.

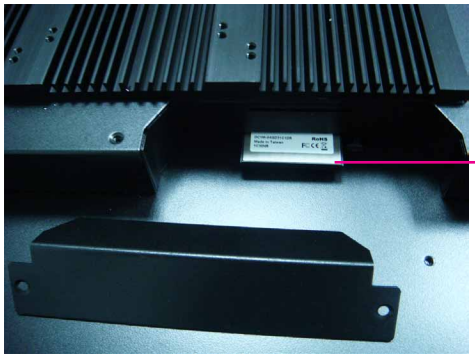

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Installing a SODIMM

MPPC 2120T

1. Remove the mounting screws around the panel and then remove the panel cover.

2. Lift the panel to access the SODIMM socket.

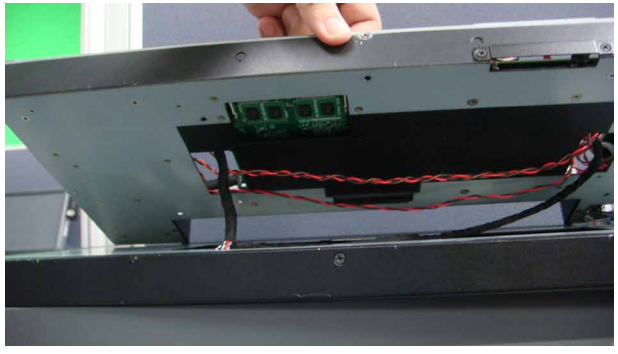

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

MPPC 3220T

1. Remove the mounting screws around the panel and then remove the panel cover.

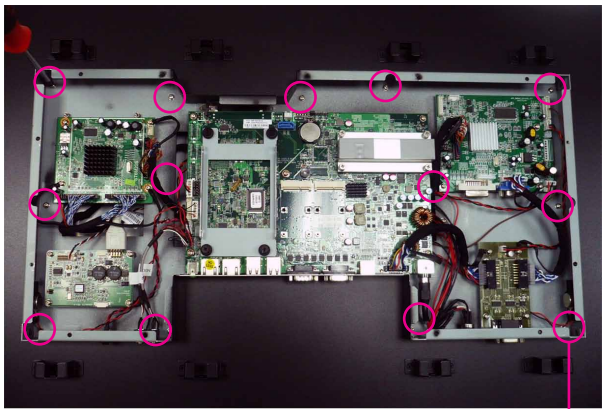

2. Lift the panel to access the SODIMM socket.

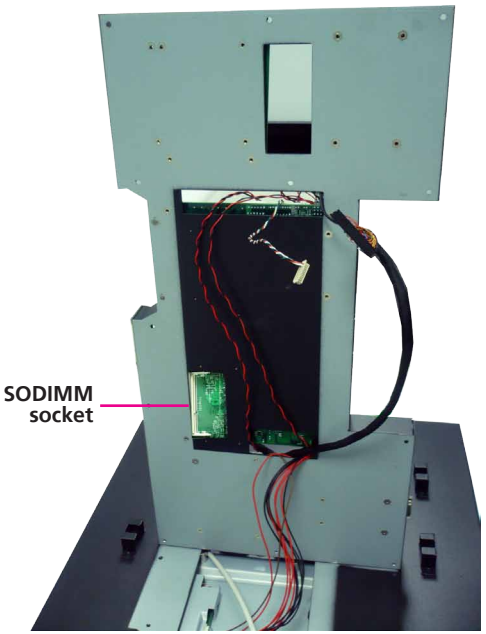

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

3. Insert the module into the socket at an approximately 30 degrees angle. Apply firm even pressure to each end of the module until it slips into the socket. The gold-plated connector on the edge of the module will almost completely disappear inside the socket.

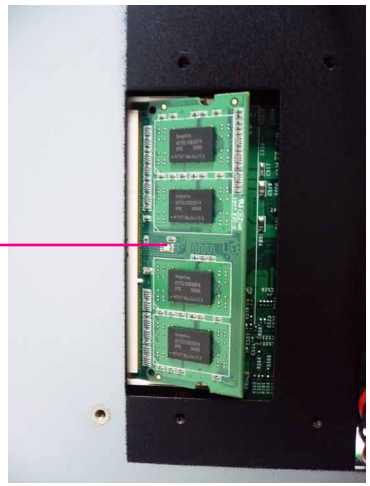

4. Push the module down until the clips on both sides of the socket lock into position. You will hear a distinctive "click", indicating the module is correctly locked into position.

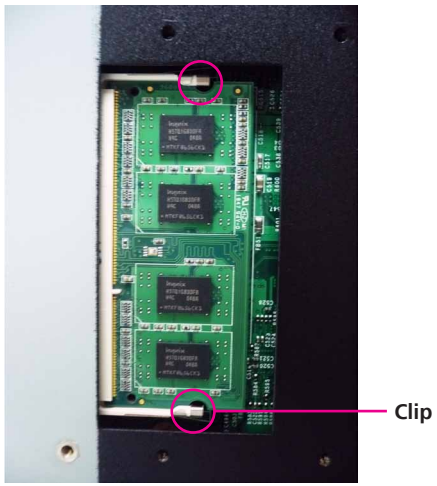

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Installing a SATA DOM

1. Remove the drive bay bracket. The SATA connector is readily accessible upon removing the bracket.

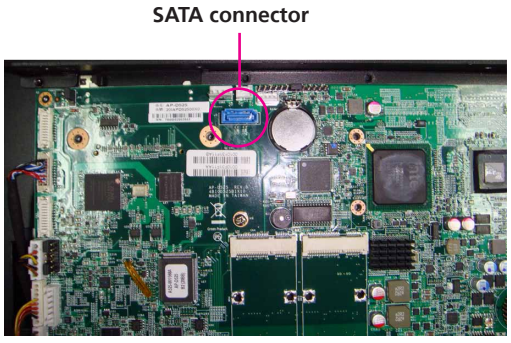

2. Remove the screw.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

3. The SATA DOM package includes a supporting stud. The stud is used to stabilize the SATA DOM module.

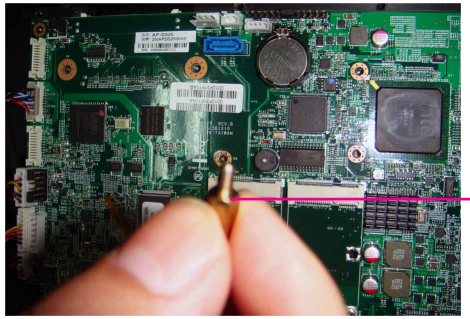

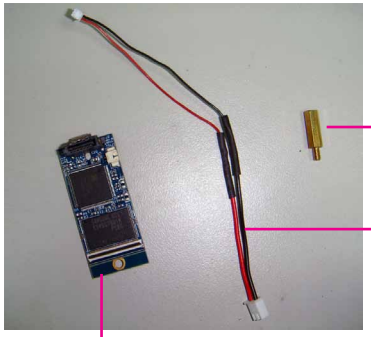

4. Install the supporting stud. Make sure the stud is fastened in place.

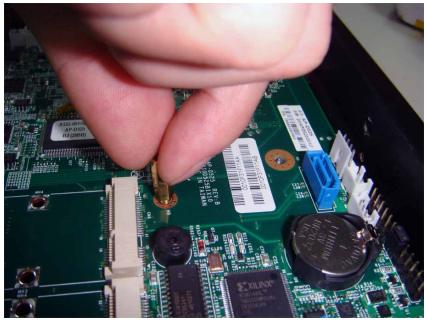

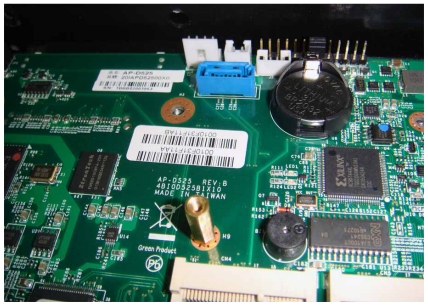

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

5. Connect one end of the provided cable to the connector on the module.

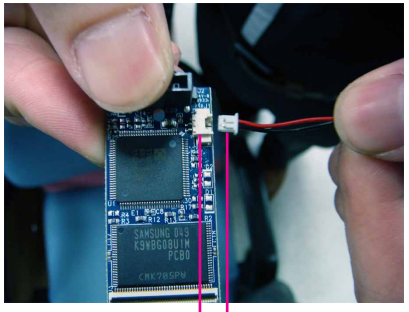

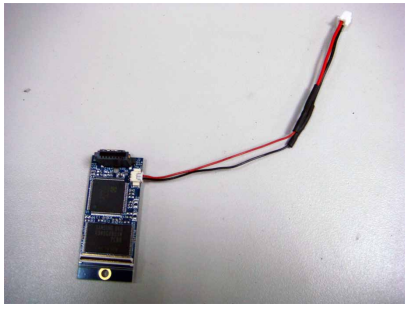

6. Install the module to the SATA port via the connector at the solder side of the module and then secure the module using the mounting screw you removed in step 2.

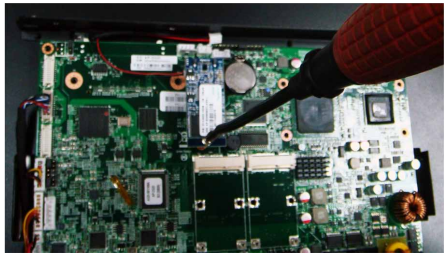

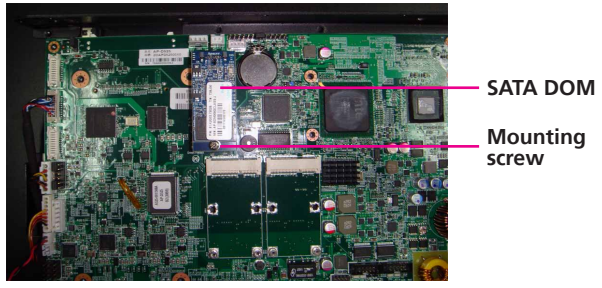

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

7. Connect the other end of the cable to the connector on the board.

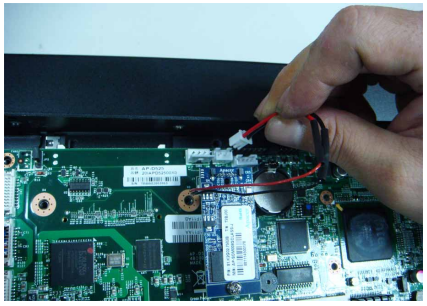

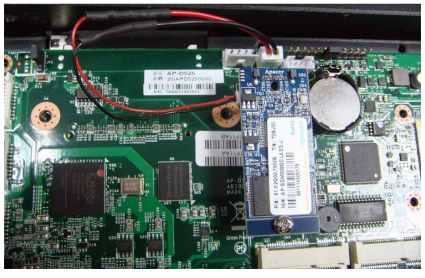

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Installing a Mini PCIe Module

1. The Mini PCIe module package includes the following items.

Mini PCIe Module

Antennas

RF Cables

2. Insert the Mini PCIe module into the Mini PCIe slot at a 45 degrees angle until the gold-plated connector on the edge of the module completely disappears inside the slot.

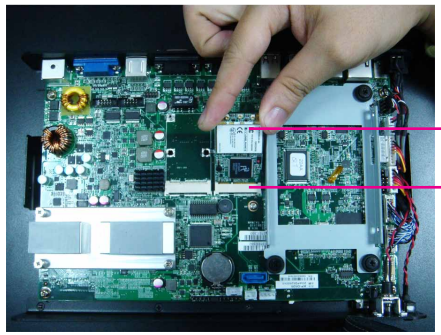

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

3. Secure the module with mounting screws.

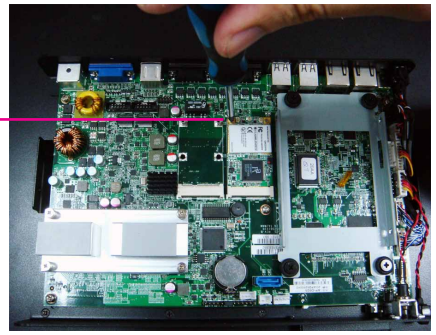

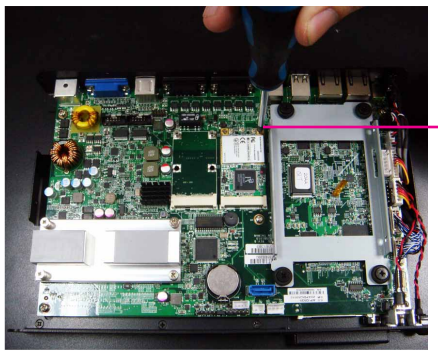

4. Attach one end of the RF cables onto the module.

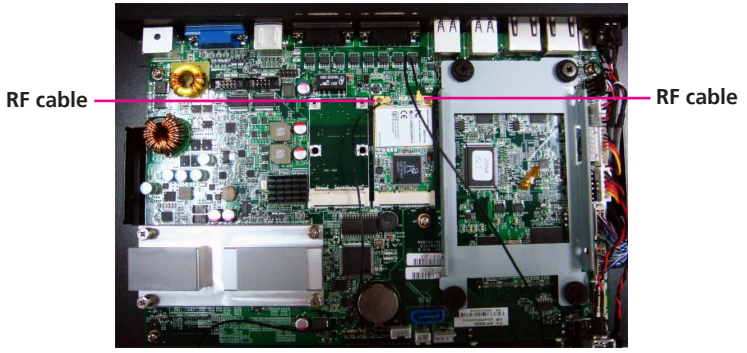

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

5. Push the antenna hole cover.

6. Remove the antenna hole covers.

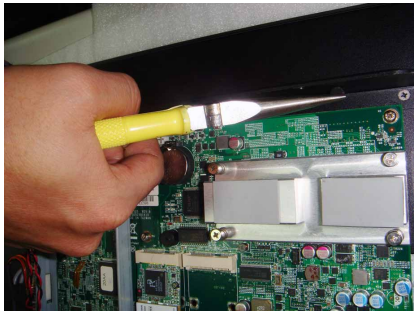

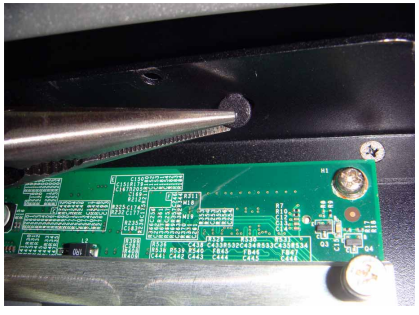

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

7. Insert the antenna jack end of the cable through the antenna hole.

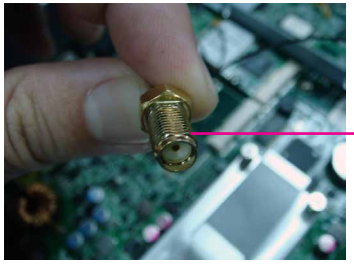

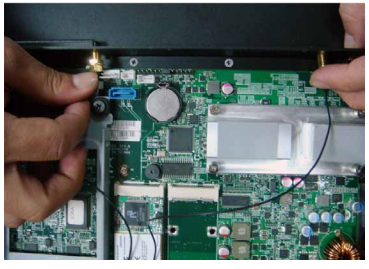

8. Insert the ring onto the antenna jack end of the cable.

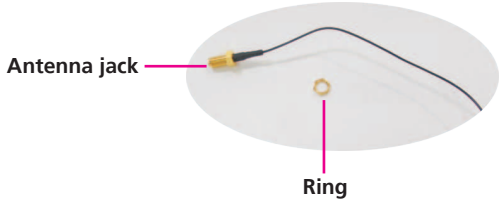

MPPC 2120T

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

MPPC 3220T

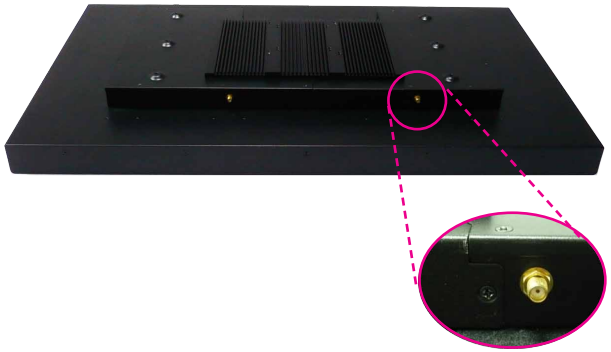

9. Connect external antennas to the antenna jacks.

MPPC 2120T

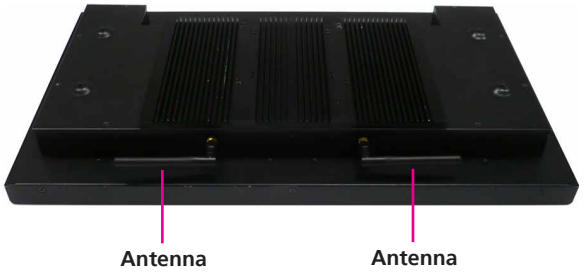

MPPC 3220T

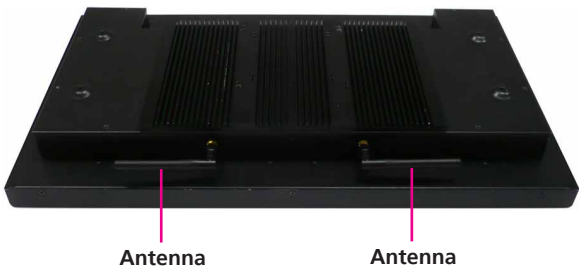

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Installing the 1 to 2 VGA Splitter (Optional)

1. The photo below shows the location of the mounting studs.

2. The optional VGA Splitter package comes with a VGA splitter board, 2 cables and 2 mounting screws.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

3. Using the cable shown below, connect one end of the cable to the connector on the VGA splitter card.

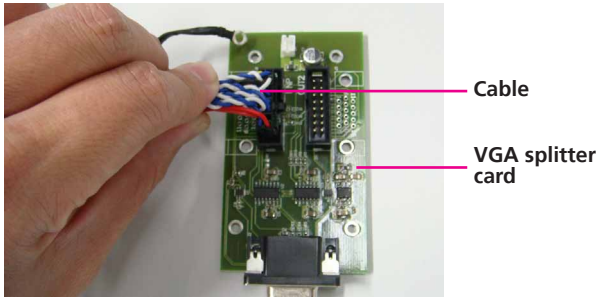

4. Using the cable shown below, connect one end to the other connector on the VGA splitter card.

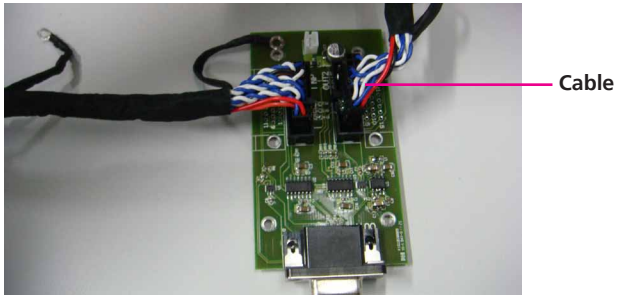

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

5. The photo below shows the 2 cables connected to the VGA splitter card.

6. Remove the mounting screws of the VGA port cover and then remove the cover. This space will be used to install the VGA splitter.

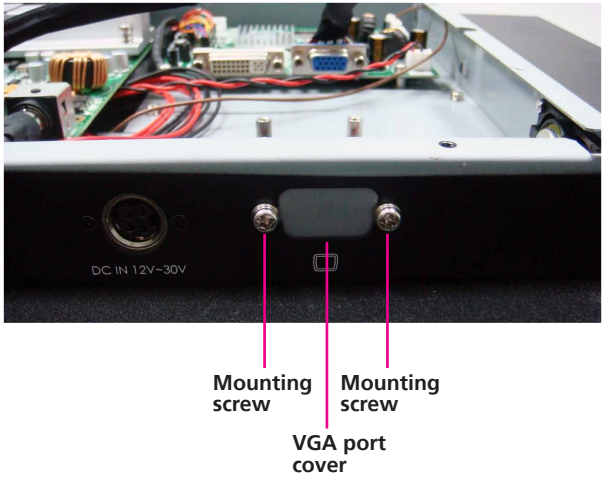

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

7. Install the VGA Splitter into the chassis and then use the provided mounting screws to secure the card in place.

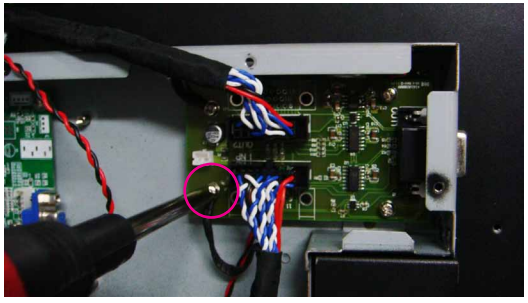

8. Connect the cable shown below to the main board.

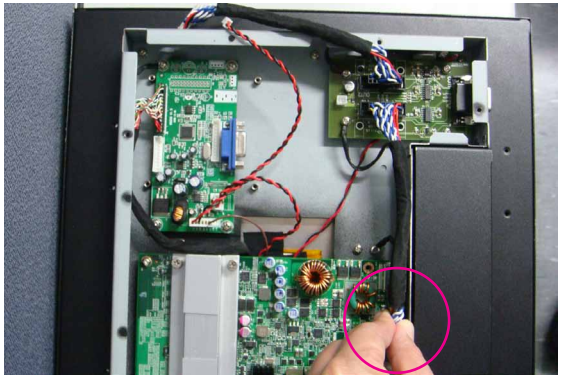

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

9. Secure the board with mounting screw.

10. Connect the cable shown below to the other card.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

11. Secure the card with mounting screw.

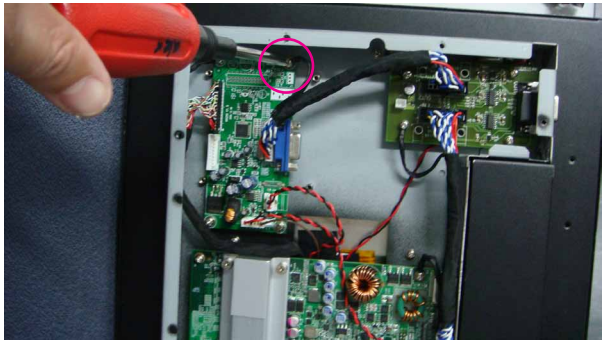

12. Connect the power cable to the VGA splitter card.

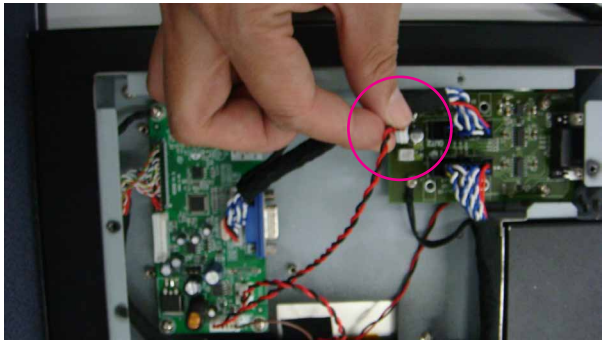

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

13. The photo below shows the VGA splitter card installed in place with the proper cables connected.

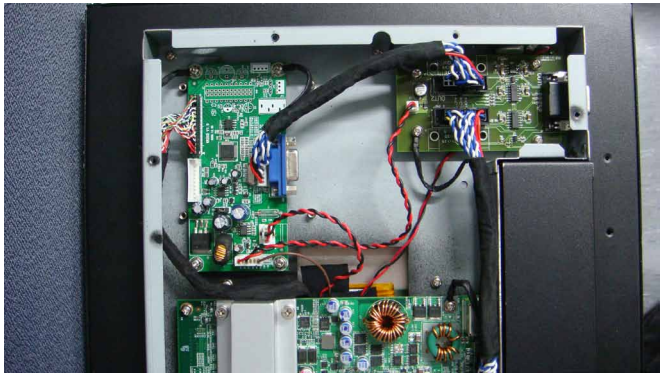

14. Secure the VGA port with screws.

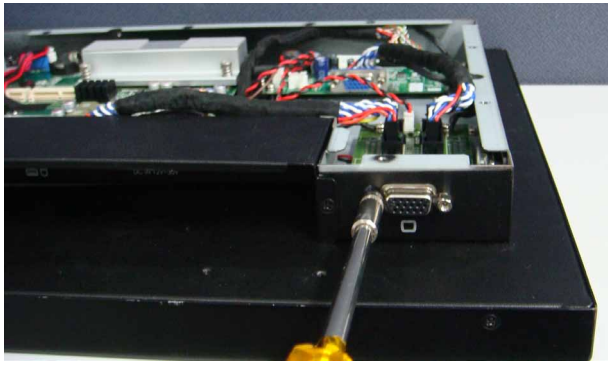

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Removing the Rear I/O Ports Cover

MPPC 2120T

1. Remove the mounting screws of the rear I/O ports cover.

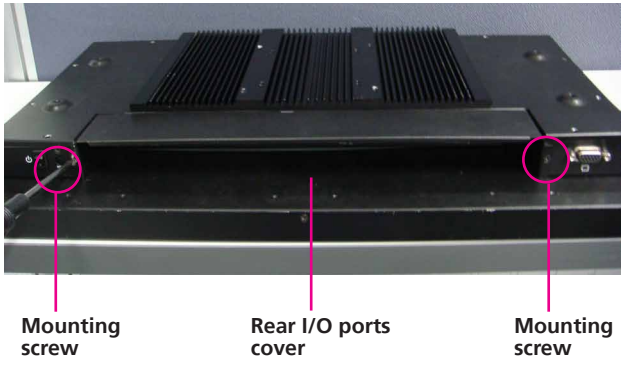

2. Remove the cover to access the I/O ports.

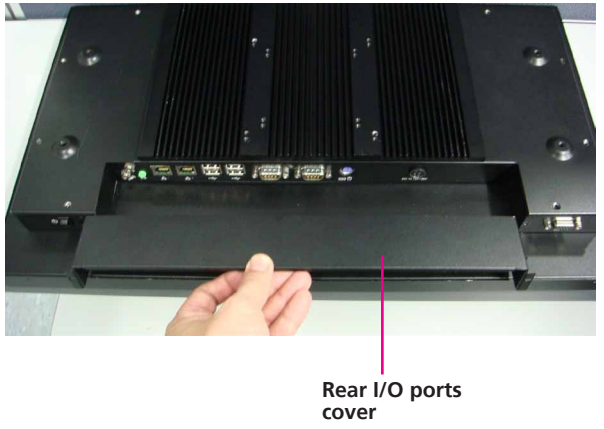

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

MPPC 3220T

1. Remove the mounting screws of the rear I/O ports cover.

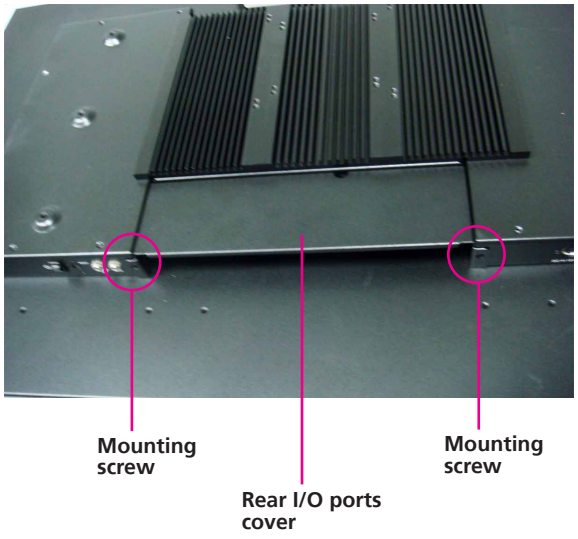

2. Remove the cover to access the I/O ports.

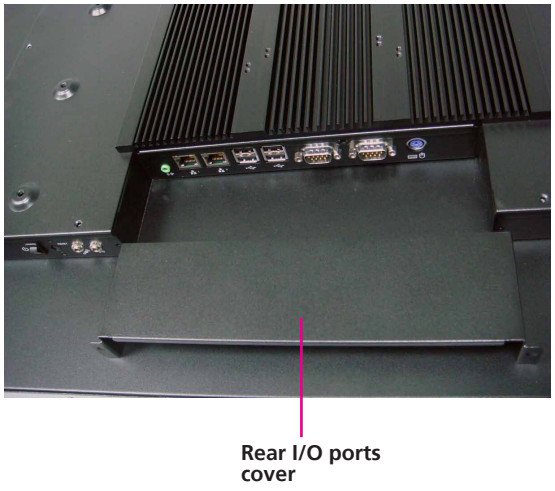

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Panel Mounting

1. Select a place on the panel where you will mount the Panel PC.
2. Cut out a shape on the panel that corresponds to the Panel PC's rear dimensions.

   The thickness of the panel (e.g. steel board, plank, acrylic board, wall, etc.) where you will mount the Panel PC must not exceed 7mm. If the distance between the front bezel and panel mount hole is too wide, it will not fit the panel mount kit.

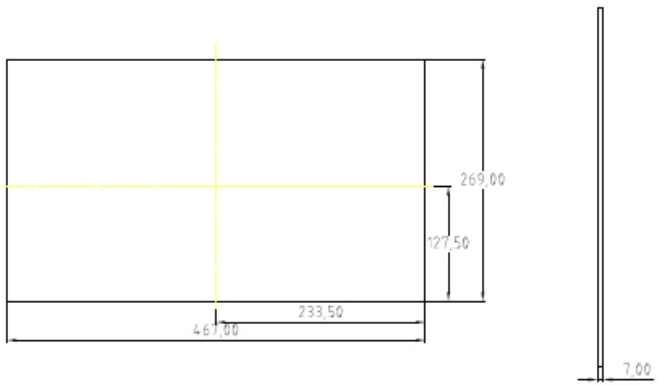

MPPC 2120T

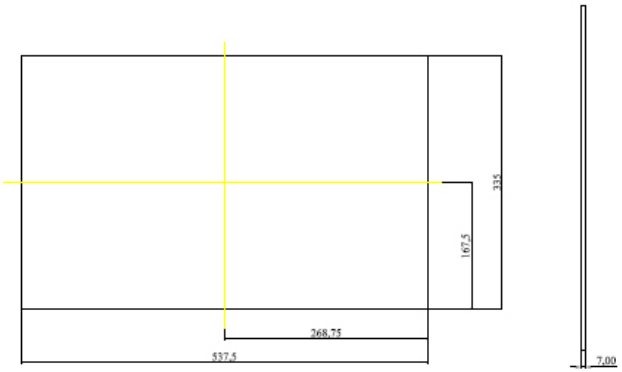

MPPC 3220T

3. Slide the Panel PC through the hole until it is properly fitted against the panel.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Panel Mount Brackets (Optional)

1. The optional panel mounting brackets must be attached to the rear side of the Panel PC.

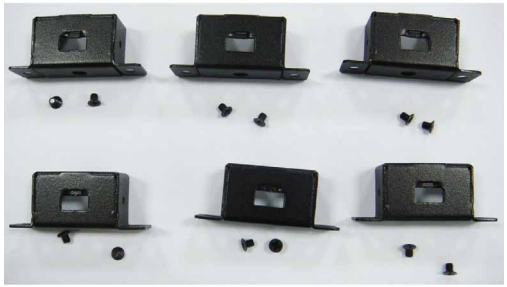

MPPC 2120T
6x Panel Mount Brackets With Screws
P/N: 5043330466X00

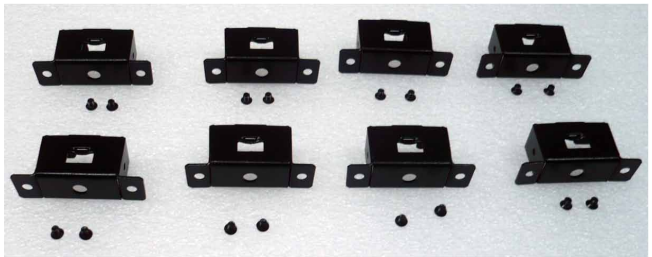

MPPC 3220T
8x Panel Mount Brackets With Screws
P/N: 5043330465X00

2. The panel mounting holes are used to attach the panel mounting brackets.

MPPC 2120T

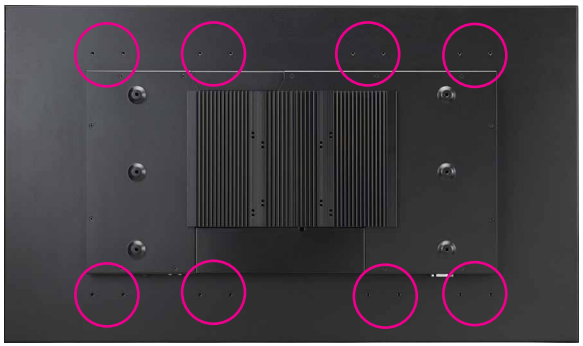

MPPC 3220T

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

3. Position the holes of the bracket to the mounting holes on the Panel PC.

4. Use the provided mounting screws to secure the bracket.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

5. The photo below shows the brackets mounted in place.

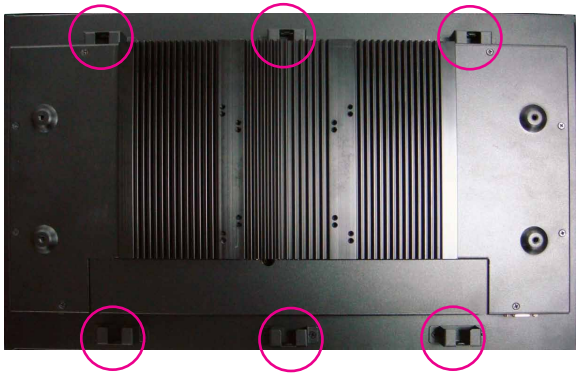

MPPC 2120T

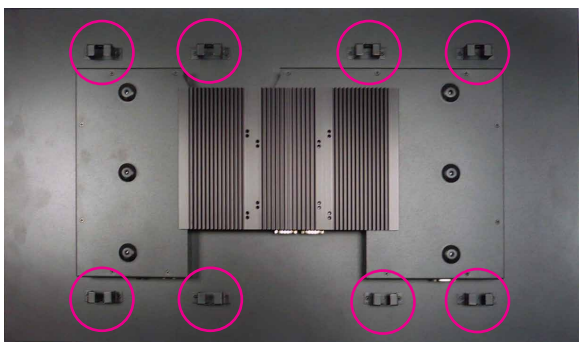

MPPC 3220T

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Panel Mount Kit (Optional)

1. The optional mounting clamps must be attached along the rear edges of the Panel PC.

Note: The mounting clamps are included in the MPPC 2120T Panel Mount Kit (P/N: 5043330466X00) and MPPC 3220T Panel Mount Kit (P/N: 5043330465X00).

2. Position the mounting clamps along the rear edges of the Panel PC. The first and second clamps must be positioned and secured diagonally prior to mounting the rest of the clamps. Tighten the clamp's screw until it touches the panel. Do not overtighten the screws to prevent damaging the Panel PC.

3. The photo below shows the rear view of the Panel PC mounted on the panel.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

4. The photo below shows the front view of the Panel PC mounted on the panel.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

VESA Mount (Optional)

1. For VESA mounting, attach the metal plates onto the VESA mounting holes.

Metal plate

2. Attach the mounting rail onto the metal plates of one side.

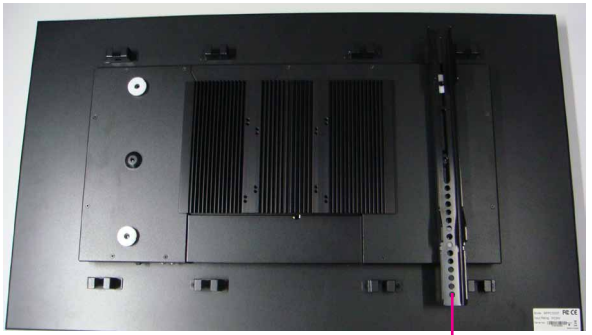

Mounting rail

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

3. Attach the mounting rail onto the metal plates of the other side.

4. Secure the mounting rails with the provided mounting screws.

Mounting screw

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

5. Hook the VESA mount bracket onto the mounting rails.

VESA mount bracket

6. Secure the VESA mount bracket with the provided mounting screws.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Chapter 4: BIOS Setup

This chapter describes how to use the BIOS setup program for the MPPC 2120T/3220T. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NEXCOM Web site at www.nexcom.com.tw.

About BIOS Setup

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure such items as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the Setup options, and second, to make settings appropriate for the way you use the computer.

When to Configure the BIOS

This program should be executed under the following conditions:

- When changing the system configuration
- When a configuration error is detected by the system and you are prompted to make changes to the Setup program
- When resetting the system clock
- When redefining the communication ports to prevent any conflicts
- When making changes to the Power Management configuration
- When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering Setup

When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing <Del> allows you to enter Setup. Another way to enter Setup is to power on the computer and wait for the following message during the POST:

```
TO ENTER SETUP BEFORE BOOT
PRESS <CTRL-ALT-ESC>
Press the <Del> key to enter Setup:
```

Legends

Key	Function
Right and Left arrows	Moves the highlight left or right to select a menu.
Up and Down arrows	Moves the highlight up or down between sub-menus or fields.
<Esc>	Exits to the BIOS Setup Utility.
+ (plus key)	Scrolls forward through the values or options of the highlighted field.
- (minus key)	Scrolls backward through the values or options of the highlighted field.
Tab	Selects a field.
<F1>	Displays General Help.
<F10>	Saves and exits the Setup program.
<Enter>	Press <Enter> to enter the highlighted sub-menu.

Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu

When "▶" appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press <Enter>.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

BIOS Setup Utility

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from six setup functions and one exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the submenu.

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

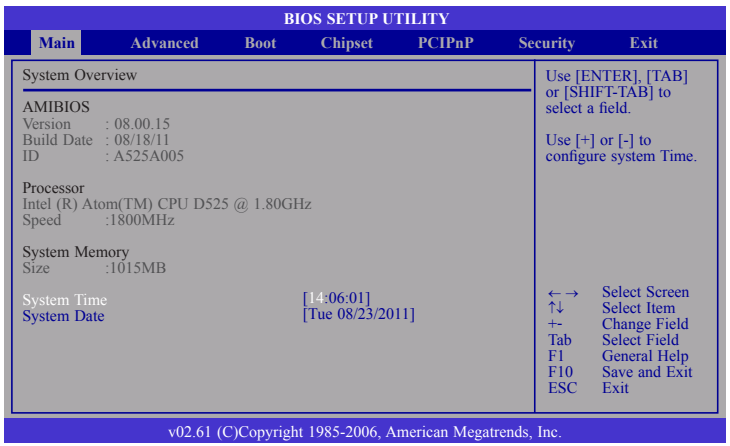

AMI BIOS

Displays the detected BIOS information.

Processor

Displays the detected processor information.

System Memory

Displays the detected system memory information.

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Sunday to Saturday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1980 to 2099.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.

Setting incorrect field values may cause the system to malfunction.

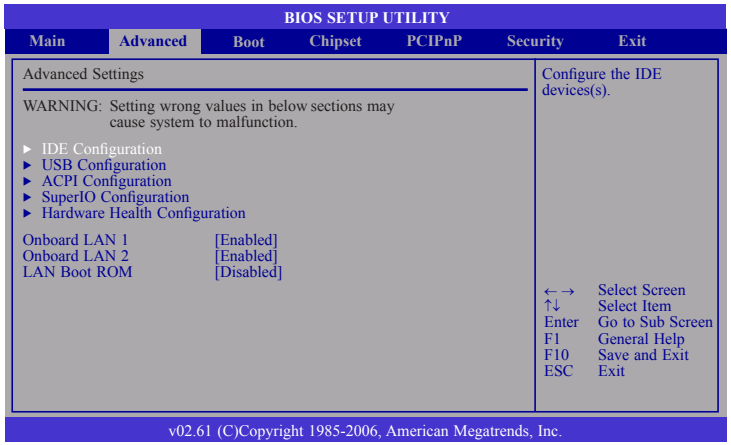

IDE Configuration

This section is used to configure the IDE drives.

USB Configuration

This section is used to configure USB devices.

ACPI Configuration

This section is used to configure the ACPI function.

Super IO Configuration

This section is used to configure the I/O functions supported by the onboard Super I/O chip.

Hardware Health Configuration

This section is used to configure the hardware monitoring events such as the temperature, fan speed and voltages.

Onboard LAN 1 and Onboard LAN 2

Enables or disables the onboard LAN.

LAN Boot ROM

Enable this field if you want to use the boot ROM (instead of a disk drive) to boot-up the system and access the local area network directly. If you wish to change the boot ROM's settings, type the <Shift> and <F10> keys simultaneously when prompted during boot-up. Take note: you will be able to access the boot ROM's program (by typing <Shift> + <F10>) only when this field is enabled.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

IDE Configuration

This section is used to configure the IDE drives.

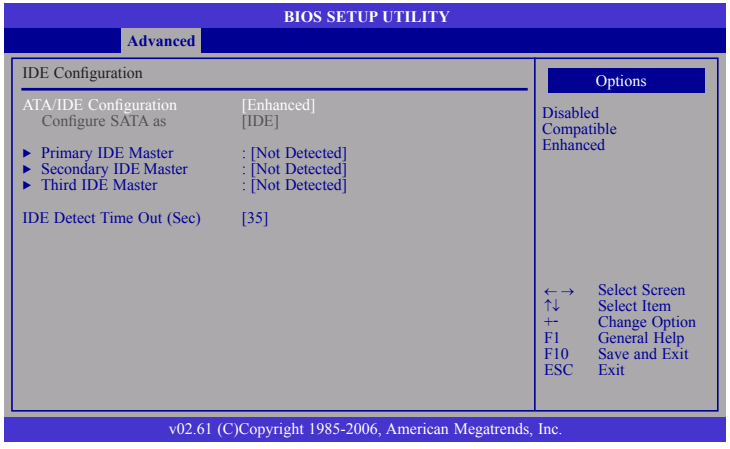

ATA/IDE Configuration

Sets the SATA device to Disabled, Compatible or Enhanced mode.

If you selected Compatible, the **Legacy IDE Channels** field will appear. The options are SATA Only, SATA Pri, PATA Sec, and PATA Only.

If you selected Enhanced, the **Configure SATA As** field will appear. The option displayed is IDE. This will configure the Serial ATA drives as Parallel ATA physical storage device.

Primary IDE Master to Third IDE Master

When you enter the BIOS Setup Utility, the BIOS will auto detect the existing IDE devices then displays the status of the detected devices. To configure an IDE drive, move the cursor to a field then press <Enter>.

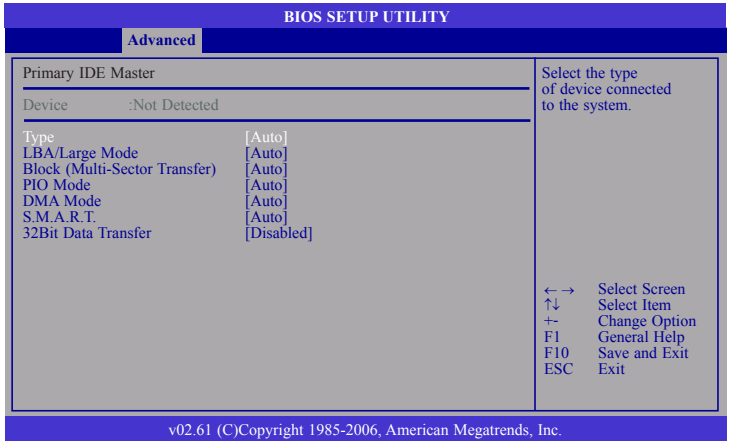

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Type

Selects the type of IDE drive connected to the system.

LBA/Large Mode

Auto	The LBA mode will automatically be enabled, that is, if the LBA mode was not previously disabled.
Disabled	Disables the LBA mode.

Block (Multi-Sector Transfer)

Auto	Data transfer to and from the device occurs multiple sectors at a time.
Disabled	Data transfer to and from the device occurs one sector at a time.

PIO Mode

Selects the data transfer mode. PIO means Programmed Input/Output. Rather than have the BIOS issue a series of commands to effect a transfer to or from the disk drive, PIO allows the BIOS to tell the controller what it wants and then let the controller and the CPU perform the complete task by themselves. Your system supports five modes, 0 (default) to 4, which primarily differ in timing. When Auto is selected, the BIOS will select the best available mode after checking your drive.

Auto	The BIOS will automatically set the system according to your hard disk drive's timing.
Mode 0-4	You can select a mode that matches your hard disk drive's timing. Caution: Do not use the wrong setting or you will have drive errors.

DMA Mode

Selects the DMA mode.

Auto	Automatically detects the DMA mode.
SWDMAn	SingleWord DMAn.
MWDMAn	MultiWord DMAn.
UDMAn	Ultra DMAn.

S.M.A.R.T.

The system board supports SMART (Self-Monitoring, Analysis and Reporting Technology) hard drives. SMART is a reliability prediction technology for ATA/IDE and SCSI drives. The drive will provide sufficient notice to the system or user to backup data prior to the drive's failure. SMART is supported in ATA/33 or later hard drives. The options are Auto (default), Enabled and Disabled.

32Bit Data Transfer

Enables or disables 32-bit data transfer.

IDE Detect Time Out (Sec)

Selects the time out value for detecting ATA/ATAPI devices.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

USB Configuration

This section is used to configure USB devices.

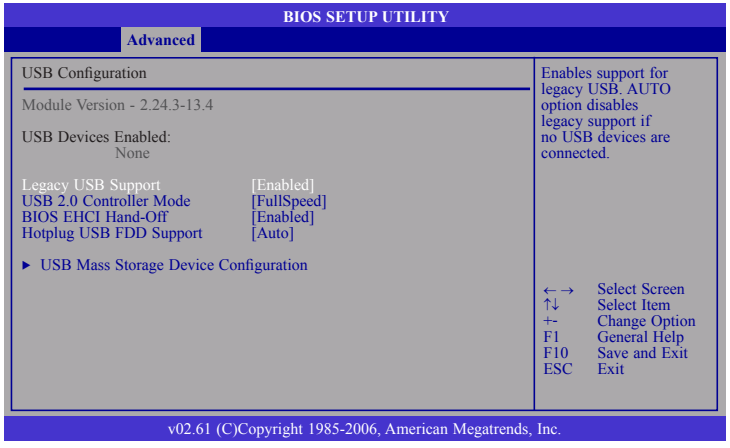
BIOS SETUP UTILITY
Advanced
USB Configuration
Module Version - 2.24.3-13.4
USB Devices Enabled:
None
Legacy USB Support [Enabled]
USB 2.0 Controller Mode [FullSpeed]
BIOS EHCI Hand-Off [Enabled]
Hotplug USB FDD Support [Auto]
► USB Mass Storage Device Configuration
Enables support for legacy USB. AUTO option disables legacy support if no USB devices are connected.
←→ Select Screen
↑↓ Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C)Copyright 1985-2006, American Megatrends, Inc.

Legacy USB Support

Due to the limited space of the BIOS ROM, the support for legacy USB keyboard (in DOS mode) is by default set to Disabled. With more BIOS ROM space available, it will be able to support more advanced features as well as provide compatibility to a wide variety of peripheral devices.

If a PS/2 keyboard is not available and you need to use a USB keyboard to install Windows (installation is performed in DOS mode) or run any program under DOS, set this field to Enabled.

USB 2.0 Controller Mode

Sets the USB 2.0 controller mode to HiSpeed (480 Mbps) or FullSpeed (12 Mbps).

BIOS EHCI Hand-Off

Enable this field when using operating systems without the EHCI hand-off support.

Hotplug USB FDD Support

Select Auto to create a dummy device only if there is no USB FDD present.

USB Mass Storage Device Configuration

Configures the USB mass storage class devices.

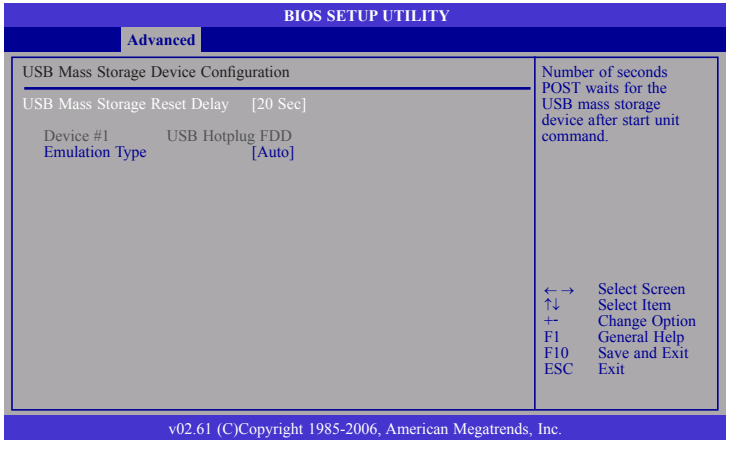
BIOS SETUP UTILITY
Advanced
USB Mass Storage Device Configuration
USB Mass Storage Reset Delay [20 Sec]
Device #1 USB Hotplug FDD
Emulation Type [Auto]
Number of seconds POST waits for the USB mass storage device after start unit command.
←→ Select Screen
↑↓ Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C)Copyright 1985-2006, American Megatrends, Inc.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

USB Mass Storage Reset Delay

Selects the number of seconds POST waits for the USB mass storage device after the start unit command.

Device #1

Displays the connected device.

Emulation Type

Auto	USB devices that are less than 530MB will be emulated as a floppy drive and the remaining as hard drives.
Forced FDD	Forces an HDD formatted drive to boot as FDD (e.g. ZIP drive)
Floppy	The USB device will be emulated as a floppy drive.
CDROM	The USB device will be emulated as a CD-ROM drive.
Hard Disk	The USB device will be emulated as a hard disk drive.

ACPI Configuration

This section is used to configure the ACPI configuration.

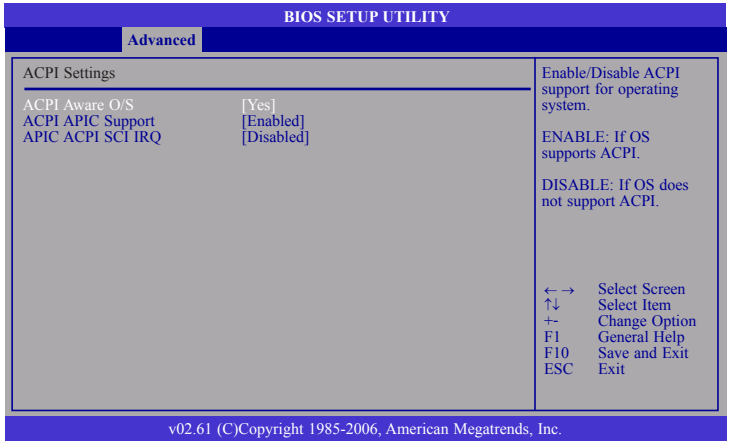

ACPI Aware OS

Enables or disables the ACPI function of the operating system.

ACPI APIC Support

Enables or disables the ACPI APIC function. Include ACPI APIC table pointer to RSDT pointer list.

APIC ACPI SCI IRQ

Enables or disables the APIC ACPI SCI IRQ.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Super IO Configuration

This section is used to configure the I/O functions supported by the on-board Super I/O chip.

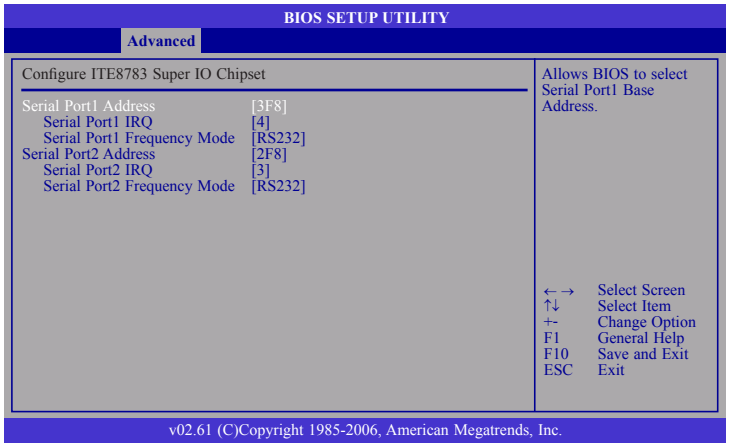

Serial Port1 Address and Serial Port2 Address

3F8, 3E8, 2E8	Allows you to manually select an I/O address for the on board serial port.
Disabled	Disables the onboard serial port.

Serial Port1 IRQ and Serial Port2 IRQ

These fields are used to select an IRQ for the onboard serial port 3, 4, 10 or 11.

Serial Port1 Frequency Mode

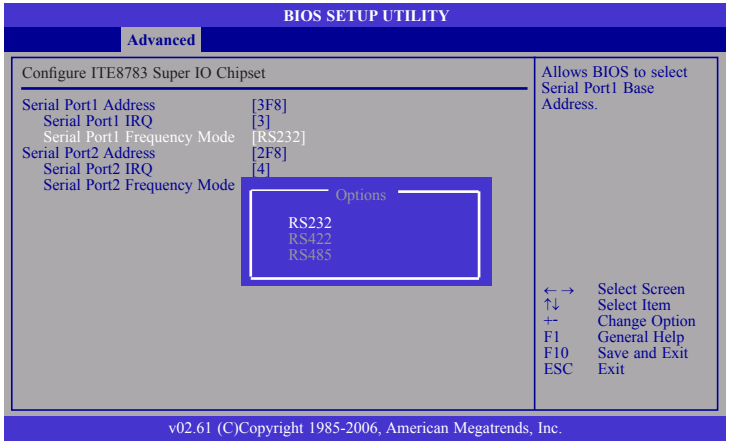

This field is used to select the frequency mode of serial port 1. The options are RS232, RS422 and RS485.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

If you selected RS485 in the "Serial Port1 Frequency Mode", the "Serial Port1 Frequency Select" field will appear prompting you to select the frequency setting. The options are 115200 bps and 921600 bps.

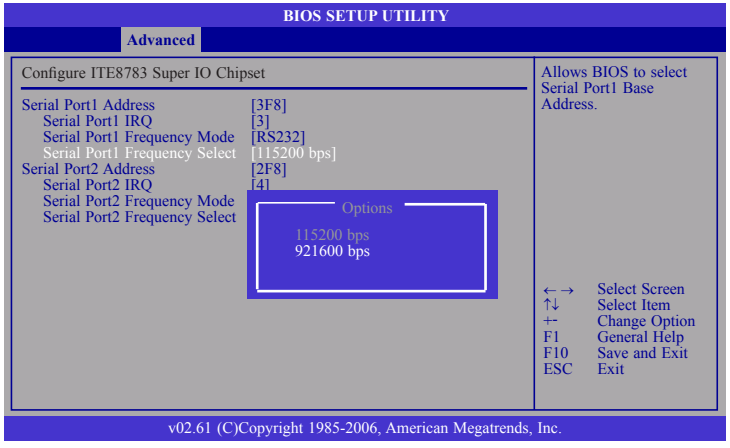

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Serial Port2 Frequency Mode

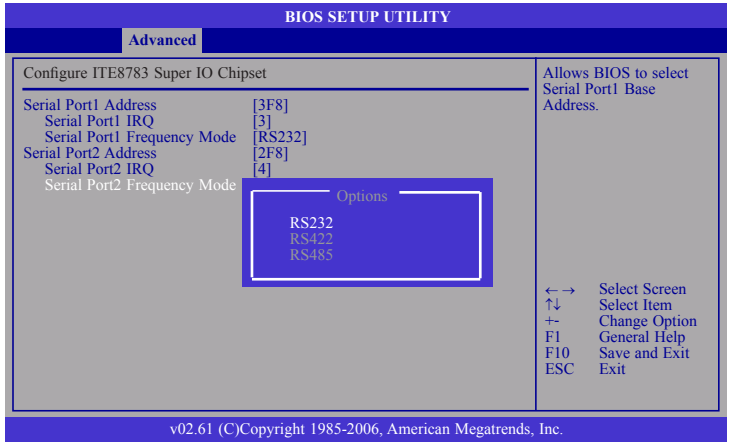

This field is used to select the frequency mode of serial port 2. The options are RS232, RS422 and RS485.

If you selected RS422 or RS485 in the "Serial Port1 Frequency Mode" and/or "Serial Port2 Frequency Mode" field, the "Serial Port1 Frequency Select" and/or "Serial Port2 Frequency Select" field will appear prompting you to select the frequency setting. The options are 115200 bps and 921600 bps.

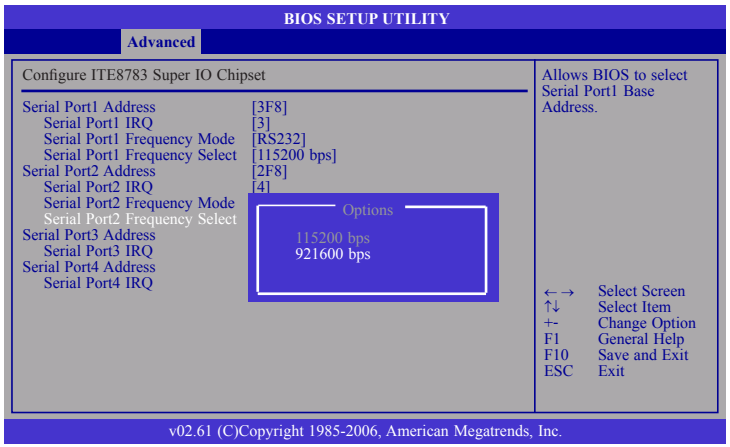

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Hardware Health Configuration

HW Health Function

This field is used to enable or disable the hardware monitoring events such as temperature, fan speed and voltages.

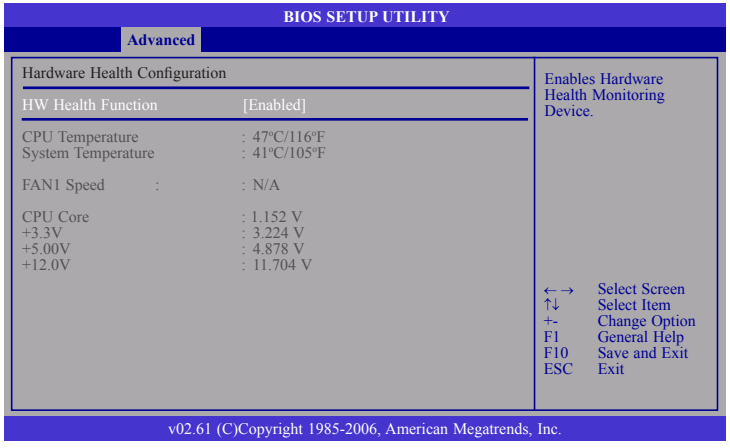

CPU Temperature and System Temperature

Detects and displays the current temperature of the CPU, chipset and the internal temperature of the system.

Fan1 Speed

Detects and displays the current fan speed in RPM (Revolutions Per Minute).

CPU Core to +12.0V

Detects and displays the output voltages.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Boot

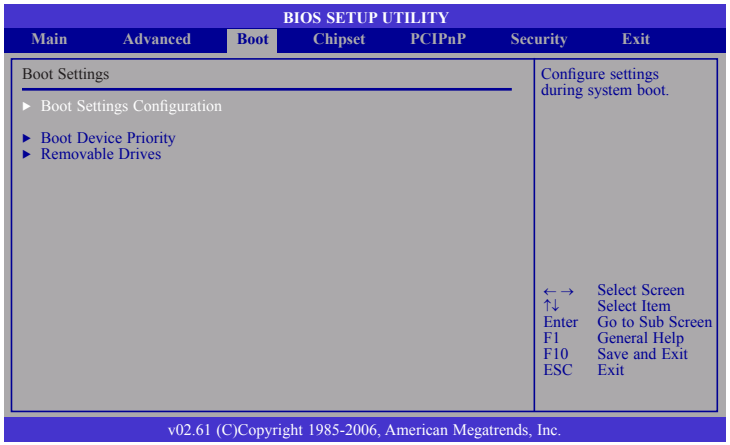

Boot Settings Configuration

This section is used to configure settings during system boot.

Boot Device Priority

This section is used to select the boot priority sequence of the devices.

Removable Drives

This section is used to select the boot priority sequence of the hard disk drives.

Boot Settings Configuration

This section is used to configure settings during system boot.

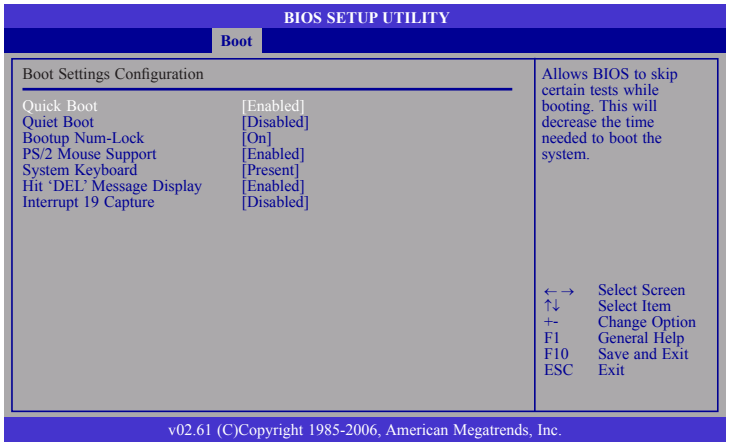
BIOS SETUP UTILITY
Boot
Boot Settings Configuration
Quick Boot [Enabled]
Quiet Boot [Disabled]
Bootup Num-Lock [On]
PS/2 Mouse Support [Enabled]
System Keyboard [Present]
Hit 'DEL' Message Display [Enabled]
Interrupt 19 Capture [Disabled]
Allows BIOS to skip certain tests while booting. This will decrease the time needed to boot the system.
← → Select Screen
↑↓ Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C)Copyright 1985-2006, American Megatrends, Inc.

Quick Boot

When Enabled, the BIOS will shorten or skip some check items during POST. This will decrease the time needed to boot the system.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Quiet Boot

Enabled Displays OEM logo instead of the POST messages.
Disabled Displays normal POST messages.

Bootup Num-Lock

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.

PS/2 Mouse Support

Enables or disables the PS/2 mouse.

System Keyboard

Enables or disables all keyboards connected to the system.

Hit 'DEL' Message Display

When enabled, the system displays the "Press DEL to run Setup" message during POST.

Interrupt 19 Capture

When enabled, it allows the optional ROM to trap interrupt 19.

Boot Device Priority

This section is used to select the boot priority sequence of all available devices.

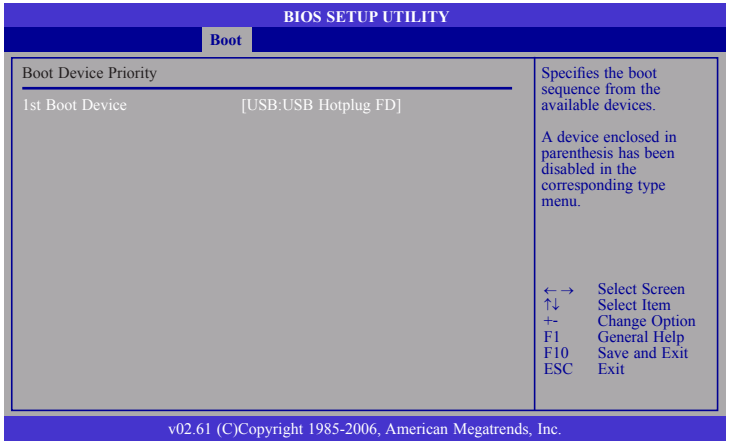
BIOS SETUP UTILITY
Boot
Boot Device Priority
1st Boot Device
[USB:USB Hotplug FD]
Specifies the boot sequence from the available devices.
A device enclosed in parenthesis has been disabled in the corresponding type menu.
←→ Select Screen
↑↓ Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C)Copyright 1985-2006, American Megatrends, Inc.

1st Boot Device

The BIOS will boot the operating system according to the sequence of the drive selected.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Removable Drives

This section is used to select the boot priority sequence of the removable drives.

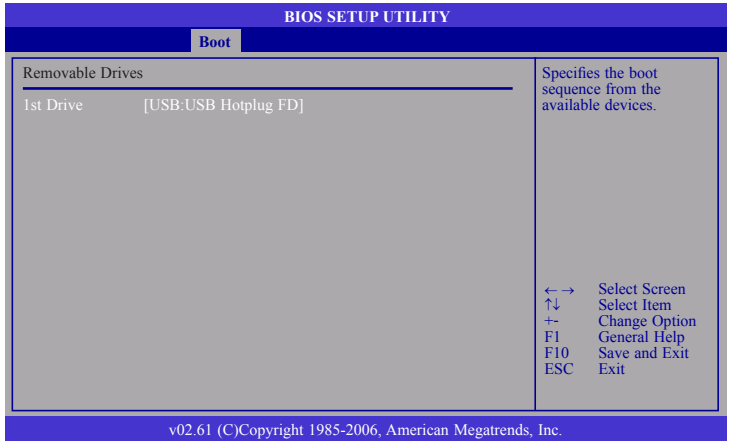

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Chipset

This section is used to configure the system based on the specific features of the chipset.

Setting incorrect field values may cause the system to malfunction.

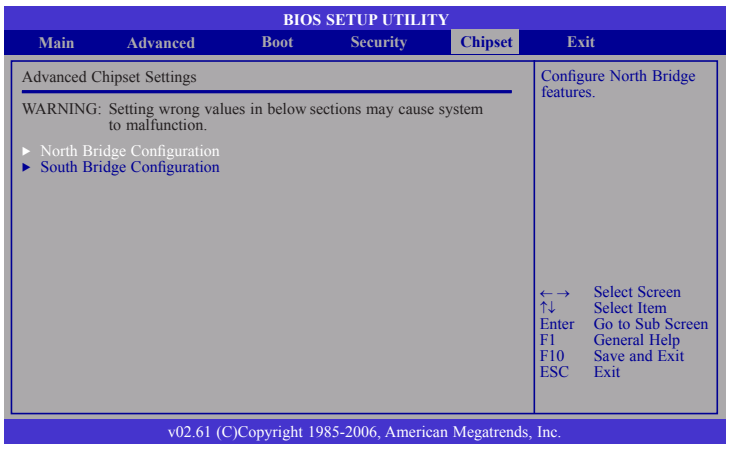

North Bridge Configuration

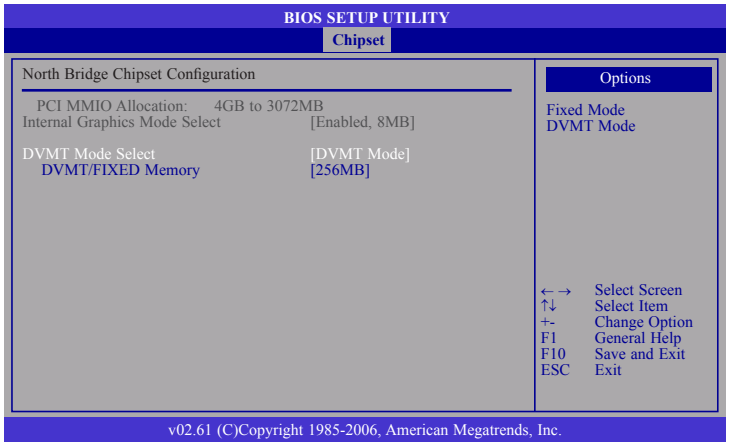

DVMT Mode Select

Selects the DVMT mode.

DVMT/Fixed Memory

This field is used to select the graphics memory size used by DVMT/Fixed mode. The options are 128MB, 256MB and Maximum DVMT.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

South Bridge Configuration

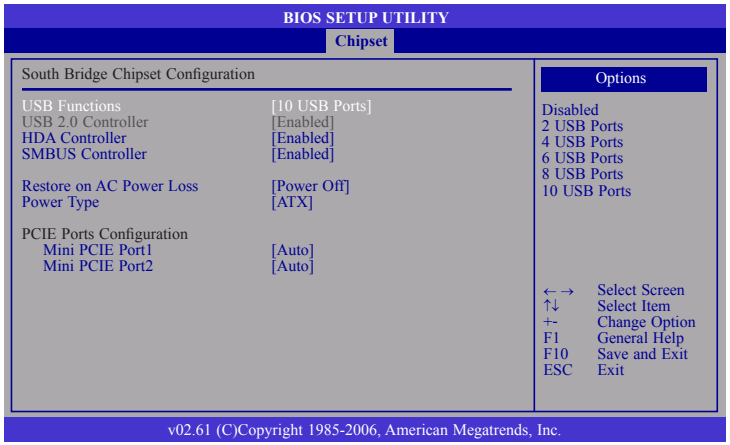

USB Functions

Enables or disables the selected USB ports. The options are 2 USB Ports, 4 USB Ports, 6 USB Ports, 8 USB Ports and 10 USB Ports.

USB 2.0 Controller

This field is used to enable or disable the Enhanced Host Controller Interface controller.

HDA Controller

Enables or disables the onboard audio.

SMBUS Controller

Enables or disables the SMBUS controller.

Restore On AC Power Loss

Power Off When power returns after an AC power failure, the system's power is off. You must press the Power button to power-on the system.

Power On When power returns after an AC power failure, the system will automatically power-on.

Last State When power returns after an AC power failure, the system will return to the state where you left off before power failure occurs. If the system's power is off when AC power failure occurs, it will remain off when power returns. If the system's power is on when AC power failure occurs, the system will power-on when power returns.

Power Type

Selects the type of power supply. The options are AT and ATX.

Mini PCIE Port1 and Mini PCIE Port2

Configures the Mini PCIE ports.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

PCIPnP

This section is used to configure settings for PCI/PnP devices.

Setting incorrect field values may cause the system to malfunction.

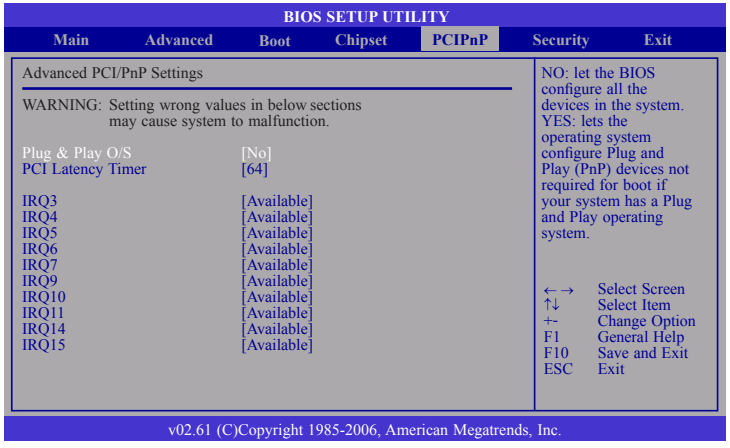

Plug & Play O/S

Yes Configures Plug and Play (PnP) devices that are not required to boot in a Plug and Play supported operating system.
No The BIOS configures all the devices in the system.

PCI Latency Timer

This feature is used to select the length of time each PCI device will control the bus before another takes over. The larger the value, the longer the PCI device can retain control of the bus. Since each access to the bus comes with an initial delay before any transaction can be made, low values for the PCI Latency Timer will reduce the effectiveness of the PCI bandwidth while higher values will improve it.

IRQ3 to IRQ15

Available The specified IRQ is available for PCI/PnP devices.
Reserved The specified IRQ is reserved for Legacy ISA devices.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Security

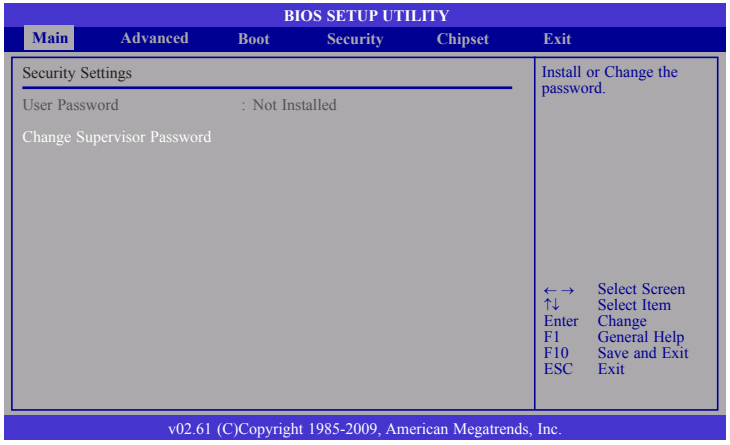

Change User Password

This field is used to set or change the user password.

To set a new password:

1. Select the Change User Password field then press <Enter>.
2. Type your password in the dialog box then press <Enter>. You are limited to eight letters/numbers.

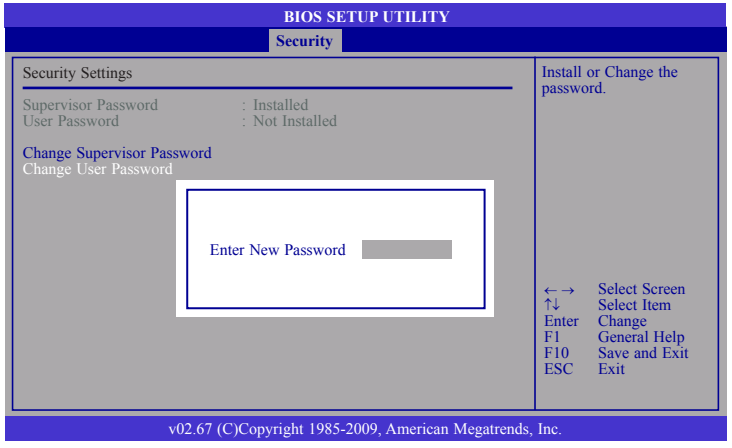

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

3. Press <Enter> to confirm the new password.

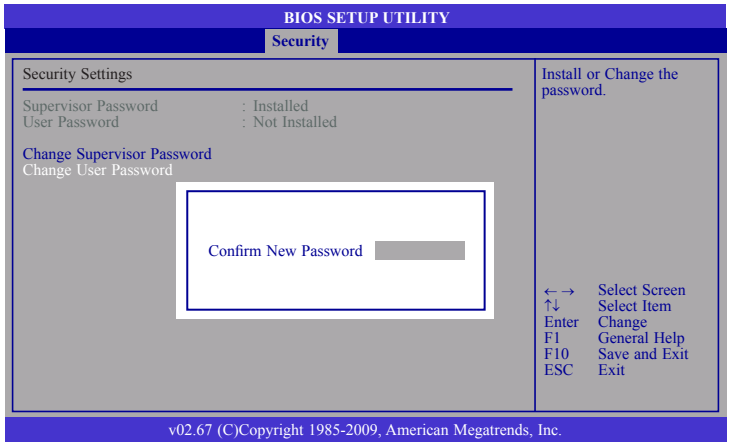

4. When the Password Installed dialog box appears, select OK.

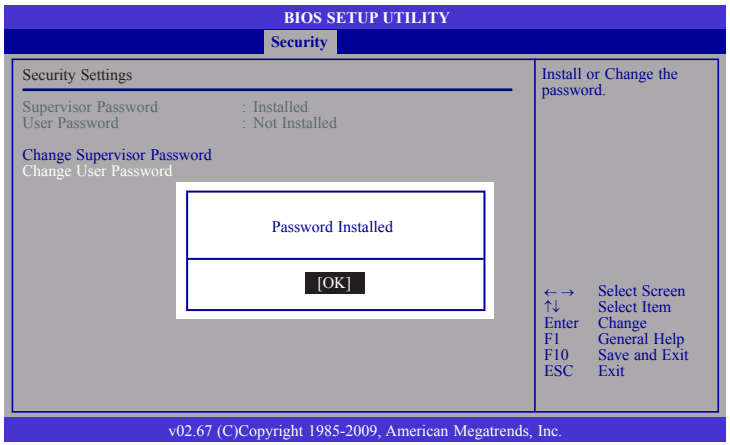

To change the password, repeat the same steps above.

After you have set the user password, the Clear User Password and Password Check fields will appear.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Clear User Password

To clear the password, select Clear User Password then press <Enter>. Click OK.

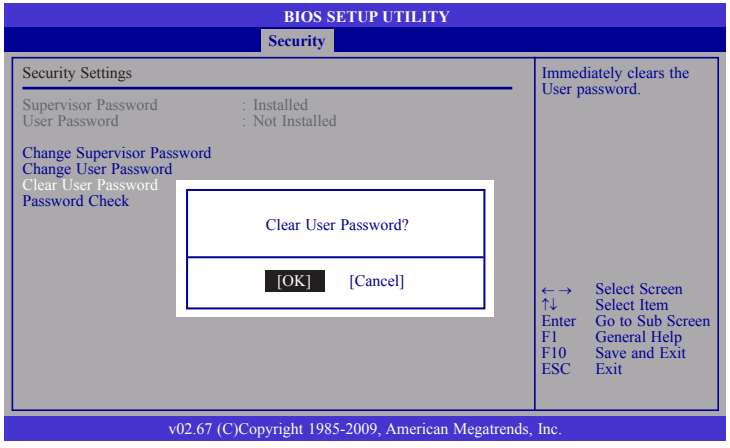

Password Check

Setup
The BIOS checks for the user password whenever accessing the Setup utility.

Always
The BIOS checks for the user password when accessing the Setup utility and booting the system.

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Exit

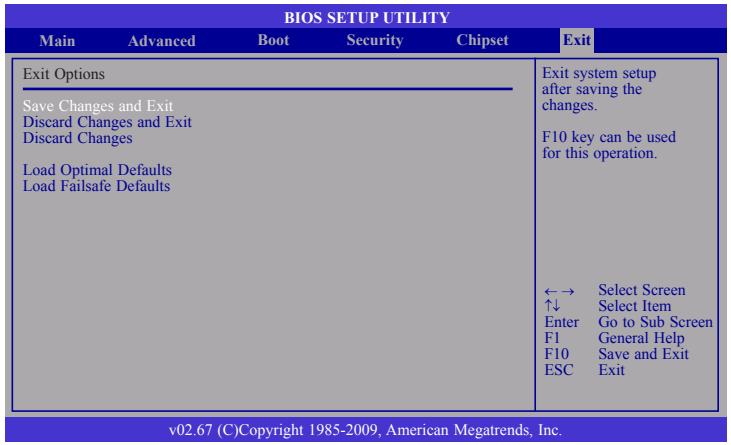
BIOS SETUP UTILITY
Main Advanced Boot Security Chipset Exit
Exit Options
Save Changes and Exit
Discard Changes and Exit
Discard Changes
Load Optimal Defaults
Load Failsafe Defaults
Exit system setup after saving the changes.
F10 key can be used for this operation.
←→ Select Screen
↑↓ Select Item
Enter Go to Sub Screen
F1 General Help
F10 Save and Exit
ESC Exit
v02.67 (C)Copyright 1985-2009, American Megatrends, Inc.

Save Changes and Exit

To save the changes and exit the Setup utility, select this field then press <Enter>. A dialog box will appear. Confirm by selecting OK.

You can also press <F10> to save and exit Setup.

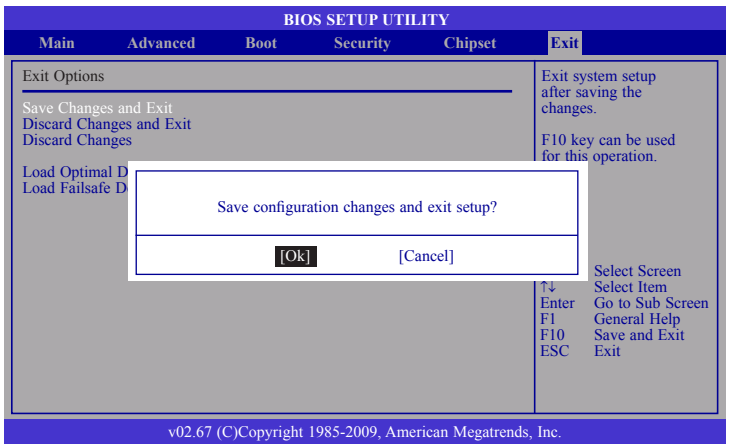

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Discard Changes and Exit

To exit the Setup utility without saving the changes, select this field then press <Enter>. A dialog box will appear. Confirm by selecting OK.

You can also press <ESC> to exit without saving the changes.

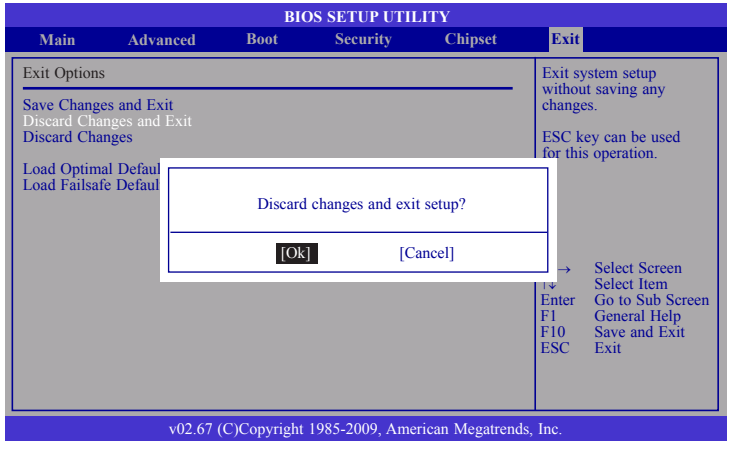

Discard Changes

To discard the changes, select this field then press <Enter>. A dialog box will appear. Confirm by selecting OK to discard all changes made and restore the previously saved settings.

You can also press <F7> to discard the changes.

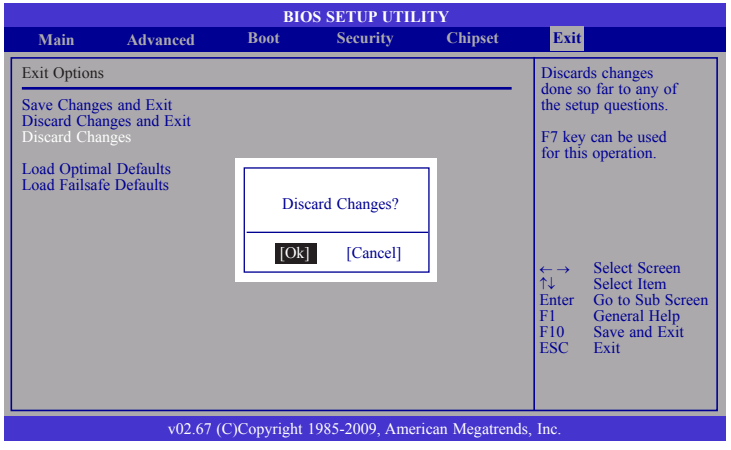

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Load Optimal Defaults

To load optimal default values from the BIOS ROM, select this field then press <Enter>. A dialog box will appear. Confirm by selecting OK.

You can also press <F9> to load optimal default values.

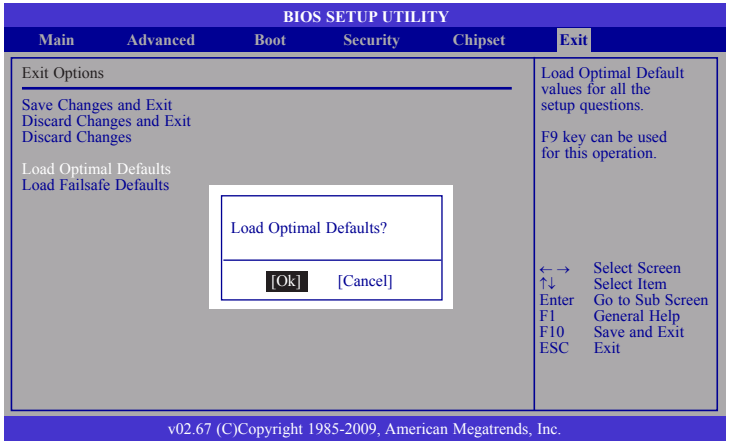

Load Failsafe Defaults

To load failsafe default values from the BIOS ROM, select this field then press <Enter>. A dialog box will appear. Confirm by selecting OK.

You can also press <F9> to load failsafe default values.

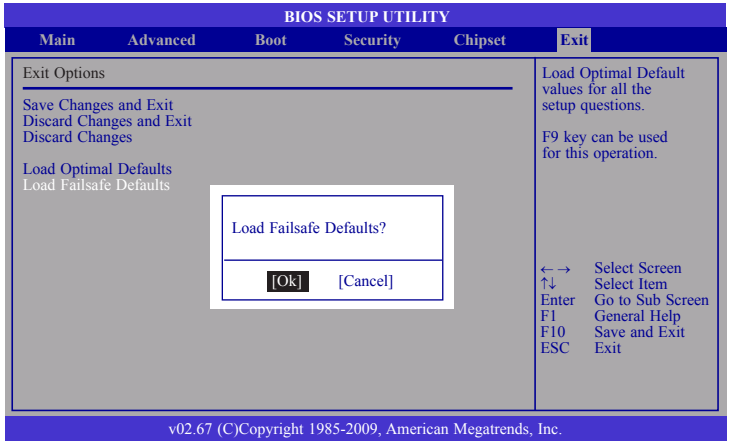

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Appendix A: Watchdog Timer

WDT Programming Guide

MPPC Series Watchdog Function Configuration Sequence Description:

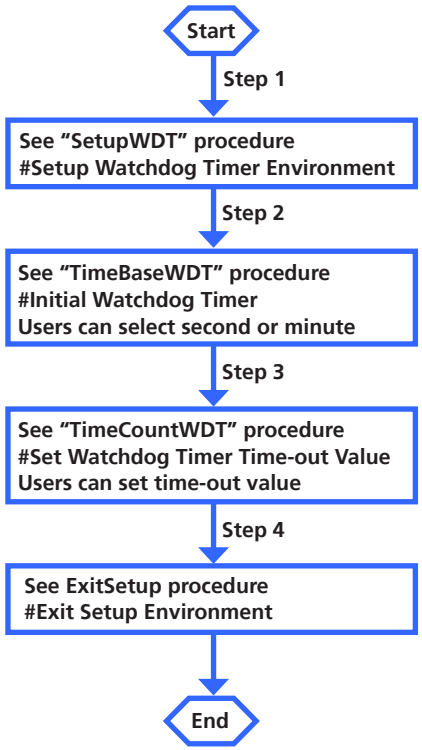

Watch Dog Sample Code

```
#define SUPERIO_PORT    0x2E
#define WDT_SET         0x72
#define WDT_VALUE 0x73

void main(void)
{
  #Enter SuperIO Configuration
        outportb(SUPERIO_PORT, 0x87);
        outportb(SUPERIO_PORT, 0x01);
        outportb(SUPERIO_PORT, 0x55);
        outportb(SUPERIO_PORT, 0x55);

  # Set LDN
        outportb(SUPERIO_PORT,0x07);
        outportb(SUPERIO_PORT+1 ,0x07);

  # Set WDT setting
        outportb(WDT_SET,0xC0);          # Use the second to come down
                                         # If choose the Minute, change
value to 0x40
  # Set WDT sec/min
        outportb(WDT_VALUE,0x05);              #Set 5 seconds
}
```

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.

Appendix B: Power Consumption

Power Consumption Measurement

Purpose

The purpose of the power consumption test is to verify the power dissipation of the system and the load of the power supply.

Test Equipment

1. PROVA CM-07 AC/DC CLAMP METER
2. Burn-in test ver: 2.0

Device Under Test

DUT: Sys #1

Test Procedure

1. Power up the DUT and then boot Windows XP.
2. Enter the standby mode (HDD power down).
3. Measure the power consumption and record it.
4. Run the Burn-in test program to apply 100% full loading.
5. Measure the power consumption and record it.

MPPC 2120T

	+12V	+24V	+30V
Full-Loading Mode	4.14A	2.09A	1.68A
Total	49.68W	50.16W	50.4W
Standby Mode	0.92A	0.48A	0.39A
Total	11.04W	11.52W	11.7W

MPPC 3220T

	+24V
Full-Loading Mode	2.72A
Total	65.28W
Standby Mode	0.56A
Total	13.44W

Copyright © 2012 NEXCOM International Co., Ltd. All Rights Reserved.